
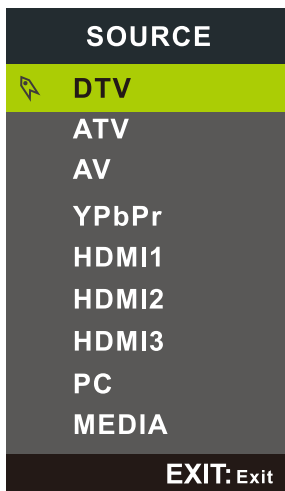 


Basic Operations

Turning On and Off

Connect the AC cord to power the TV. At this time the TV will enter standby mode and power indicator will turn red. Use Power button() on the side panel of TV or on the remote control to turn on the TV. After switching off the TV for 5 seconds, you can turn on TV again.

Select input source



Press **INPUT** button to display the input source list;

Press **▲/▼** button to select the input source you want to watch;

Press **OK** button to enter the input source;

 
Adjust the OSD Screen

- Press **MENU** button to display the MAIN OSD MENU;
- Press **◀/▶** button to select the **MENU** you want;
- Press **OK** button to enter the sub menu, and press **MENU** button to return back to the previous menu.
- Press **▲/▼** button to select the option and then press OK button to enter the submenu, press **◀/▶** button to adjust the value or press **▲/▼** button to select in the sub-menu;

You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

OSD Menu Operations

Menu Setting

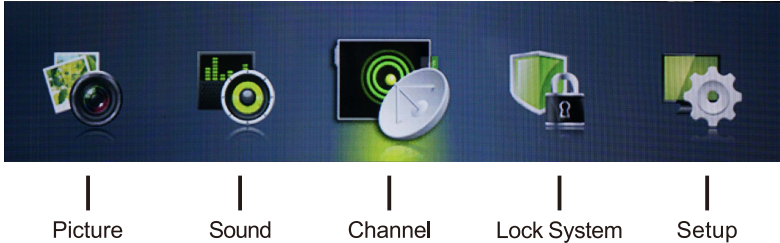

Press **MENU** button to display the MAIN OSD MENU:

Picture: Used for TV picture effect adjusting.
For example: Picture mode, colour temperature and so on.

Sound: Used for TV sound effect adjusting.
For example: Sound mode, Balance and so on.

Channel: Used for channel searching and edit, it's only available in TV input.
You can choose to automatically search, or choose to manually search according to your needs.

Lock System: Used for TV Lock effect adjusting.
For example: Channel Lock, Clear Lock and so on.

Note: When the "Lock" function is set, if the Lock System is on, please input the password to unlock, default password is **0000**.

Setup: Used for TV additional options.
For example: OSD Language, Time Settings and so on.

 
For more settings, please refer to the menu settings.

OSD Menu Operations

Media Operation

Note: Before operation MEDIA menu, Plug in USB device or memory card.

Press ▲/▼ button to select MEDIA in the source menu, and then press "OK" button to enter. You can browse multimedia files by selecting PHOTO, MUSIC, MOVIE or TEXT. Then press the "▶" button to start playing.

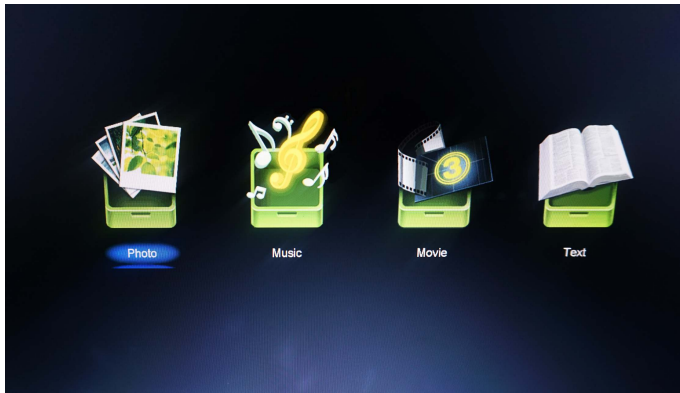

1. Press ◀/▶ button to select the option that you want to adjust in the Media menu, then press **OK** button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu.