
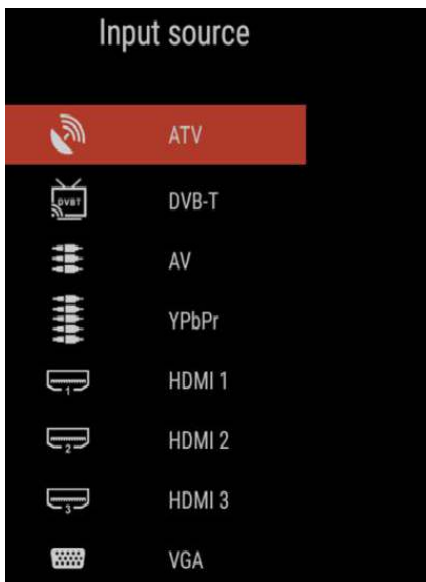 


Basic Operations

Turning On and Off

Connect the AC cord to power the TV. At this time the TV will enter standby mode and power indicator will turn red. Use Power button() on the side panel of TV or on the remote control to turn on the TV. After switching off the TV for 5 seconds, you can turn on TV again.

Select input source



Press INPUT button to display the input source list;
Press ▲/▼ button to select the input source you want to watch;
Press OK button to enter the input source;

 
Adjust the OSD Screen

- Press MENU button to display the MAIN OSD MENU;
- Press ▲/▼ button to select the MENU you want;
- Press OK button or ► button to enter the sub menu, and press ◀ button to return back to the previous menu.
- Press ▲/▼ button to select the option and then press OK button or ► button to enter the submenu, press ◀/▶ button to adjust the value or press ◀/▶ button to select in the sub-menu;

You can press MENU button to save and return back to the previous menu, and press EXIT button to exit the entire menu.

OSD Menu Operations

Menu Setting

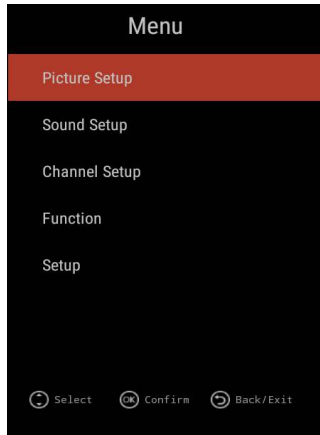

Press MENU button to display the MAIN OSD MENU:

Picture Setup: Used for TV picture effect adjusting.
For example: Picture mode, Colour temperature and so on.

Sound Setup: Used for TV sound effect adjusting.
For example: Sound mode, Balance and so on.

Channel Setup: Used for channel searching and edit, it's only available in TV input.
You can choose to automatically search, or choose to manually search according to your needs.

Function: Used for TV additional options.
For example: Teletext Language, System Lock and so on.
Note: When the "Function" is set, if the System Lock is on, please input the password to unlock, default password is 0000.

Setup: Used for TV system setup options.
For example: OSD Timer, Sleep Timer and so on.

For more settings, please refer to the menu settings.

 
OSD Menu Operations

Smart TV Operation

Press HOME button on the remote control to enter the Main Launcher.

Press the arrow buttons ▲/▼/◀/▶ to select the icon and press “OK” button to enter the sub-menu.

In smart TV mode, you can install / uninstall the application, browse the web, system settings and other operations.

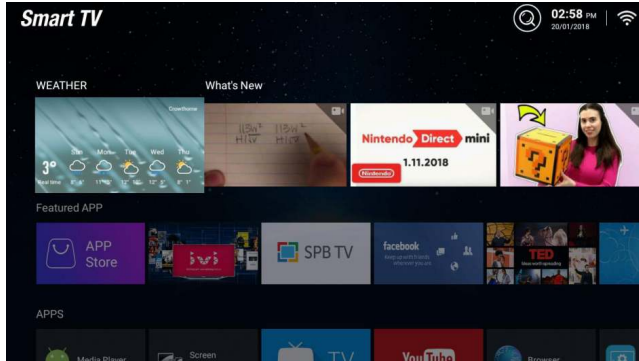


Media Operation

Note: Before operation MEDIA menu, Plug in USB device or memory card.

Press ▲/▼ button to select Media Player in the Home Page, and then press "OK" button to enter.

 You can browse multimedia files by selecting PHOTOS, MUSIC or VIDEOS. Then press the “▶” button to start playing.

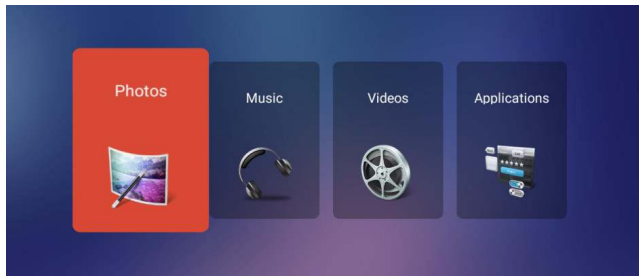

1. Press ◀/▶ button to select the option that you want to adjust in the Media menu, then press OK or ▶ button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ button to select.
3. After finishing your adjustment, press MENU button to save and return back to the previous menu and press EXIT button to exit the entire menu.

Applications

Press ◀/▶ button to select **Application** in the main menu, then press **OK** button to enter, you can install applications by this selection.

Press **EXIT** button to return back to the previous menu.