



User Manual

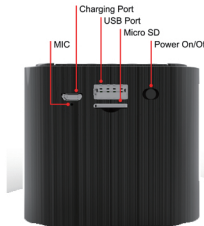

CLK HUSTON

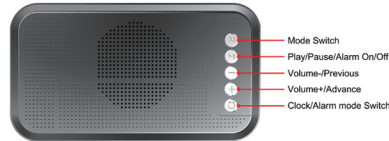

1. Power on/off button: Push to "on" to power on, push to "off" to power off;

2. "+" button :When Micro SD card and USB driver & bluetooth & FM mode, quick press means next song, long seconds press to increase volume; When clock and alarm mode, quick press to adjust number
"-" button: When Micro SD card and USB driver & bluetooth & FM mode: quick press to previous song, long press to reduce volume; When clock & alarm, quick press to adjust number

3. Pause button: when in Micro SD card/Bluetooth/USB driver/FM modes, quick press means pause or play, long press, FM channel automatic search, when Clock or alarm modes, long press to turn off alarm;

4. Model switch button: switch between Micro SD card/bluetooth/FM/Clock & Alarm modes;

5. ⌚ Mode: Quick press: Switch between clock and alarm mode, long press to adjust clock Hour & Minute and alarm hour & minute

6. Microphone: when connect bluetooth, if somebody call you or you are called, after answer the call, you can speak against the microphone

7. USB port & Micro SD port; support Micro SD card and USB driver with the capacity of 32MB-32GB and song rate of 32Kbps-320Kbps;

How to connect your mobile phone

1. Long press power off/on button can power on the device

2. Open the bluetooth device in your phone, then searching, when connect successfully, your phone will show "CLK13 HUSTON" and "connect", then play music with your mobile phone;

Please set your mobile phone volume setting, adjust the proper volume

3. Staccato Please check if there are obstructions between speaker and mobile phone or exceed the valid connection distance

4. Buttons without working

Please try to use the player that your phone comes with or other players

5. Bluetooth photo-taking function can not work

Please check your phone whether it is the system updated from Android 4.2 or updated from iPhone iOS 5.0 system!