



MANTA

LED TV

LED95501

Instrukcja obsługi / User's manual

Table of Contents

Safety warning	1
Important Safety Precautions	2
Preparation for Your New TV	3
TV Jacks Explanation	4
Side Keypad and Front Panel	5
Remote Control Instructions	6
Learning about Remote Control	7
Basic Operations	8
Main Menu Operations	10
CHANNEL Menu	10
PICTURE Menu	13
SOUND Menu	14
TIME Menu	15
LOCK Menu	16
SETUP Menu	17
Media Operation	20
Photo	21
Music	22
Movie	23
Text	24
Help	25
Product fiche	26

Safety warning

CAUTION

 
**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personnel.

If the TV has any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.



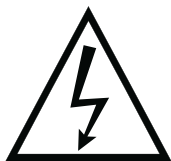

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating instructions in the literature accompanying the appliance.



 
Warning
The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Important Safety Precautions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Warning to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
16. The socket-out shall be installed near the equipment and shall be easily accessible.
17. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
18. Apparatus shall not be exposed to dripping or splashing.
19. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
20. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
21.  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
22. The USB terminal should be loaded with 0.5 A under normal operation.

Preparation for Your New TV

The TV is packaged with the TV stand separated from the cabinet. To setup the TV table stand, please carry out the installation according to the instructions below.

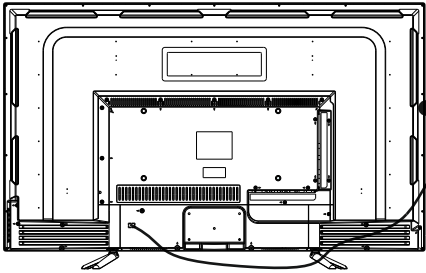


Step One

Place the TV faced down on a soft cloth or cushion to prevent the panel from being damaged


- The panel can be scratched easily, so please:
1. Choose an absolutely flat surface to place the TV on.
 2. Use soft cloth or cushion to face the TV panel, Do not put TV on the table directly.

 Always unplug the AC cord first when installing/removing the stand.

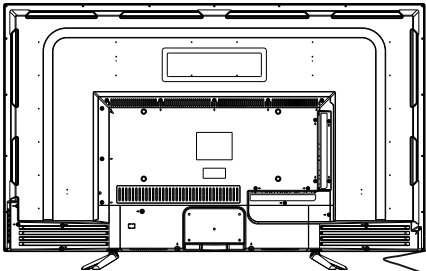


Step Two

 Take the base. Please align the screw holes of the base and the TV, and then insert the 4 screws into the 4 holes on the base and tighten them.

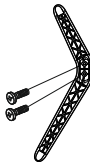


Pedestal Screws	Quantity
M4x22mm	4pcs

   

 

 


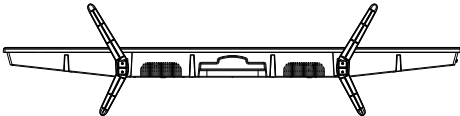Please take note of the base direction:



The bottom view of the TV (Front cabinet faces down)

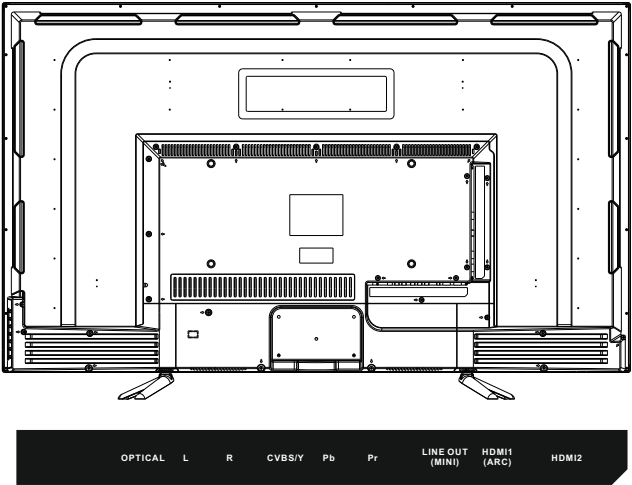TV Jacks Explanation




	OPTICAL Digital TV sound output		HDMI input Digital signal input from HDMI video connector.
	AV input External AV Signal Input And Relevant Right/Left Sound Channel		RF Connect the antenna
	Y Pb Pr input Connect to the composite terminal of your DVD/VCR (Some models without this interface)		USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	LINE OUT Shared between composite and component video.		

Side Keypad and Front Panel

Keypad Buttons

 If you cannot locate your remote, you can use the side keypad buttons on your TV to operate many TV features.

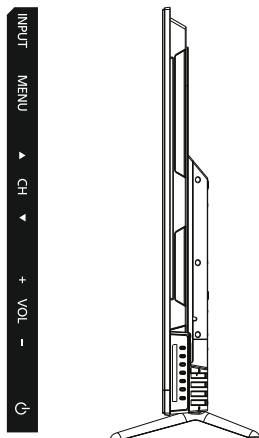

INPUT: Displays the Source Select List.

MENU: Displays the TV Main Menu.

CH▲: Scans up through the channel list. In the TV menu system, it acts like the up arrow on the remote control and can be used to select menu options.

CH▼: Scans down through the channel list. In the TV menu system, it acts like the down arrow on the remote control and can be used to select menu options.

VOL+: Increases the volume. In the TV menu system, it acts like the right arrow on the remote control and can be used to select menu options.

 
VOL-: Decreases the volume. In the TV menu system, it acts like the left arrow on the remote control and can be used to select menu options.

POWER (⏻): Turns the TV on and off.

Front Panel

About remote control working distance and angle, see next page.


Power/Standby Indicator: Blue and red dual-color LED. It shows red when the TV is turned off and blue when turned on. **Remote Control Sensor:** Remote control IR sensor, which receives infrared ray sent by remote control.

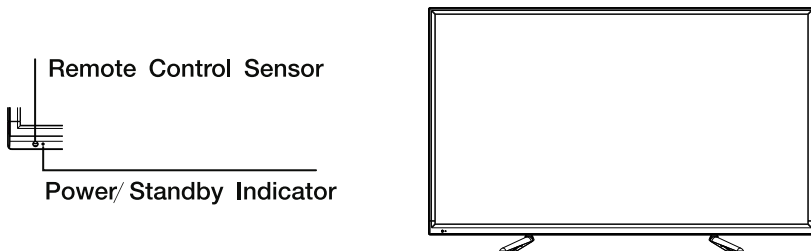


Remote Control Instructions

Inserting Batteries in the Remote

 
1. Remove the battery compartment cover from the back of the remote control by lifting the cover.

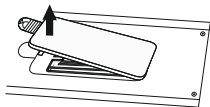

 2. Insert 2AAA batteries, making sure the polarities(+and-) are aligned correctly.

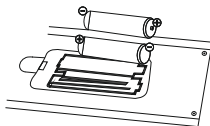

 3. Replace the cover.

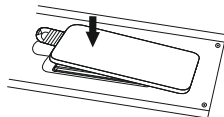

If the remote control does not work, check these points:

- Are the polarities (+, -) correct?
- Are the batteries worn out?
- Is there an AC power failure?
- Is the power cord plugged in?
- Is there any interference or block near the remote control sensor?

 
CAUTION:

- Used batteries should be recycled.
- Keep out of children's reach.
- DO NOT use new and old batteries together.
- Change both the batteries at the same time.
- When not using the remote control for a long time, remove the batteries from the unit.


Warning: All batteries (packed or in use) must not be exposed to high temperature like sun heat or fire.

Remote Control Reception Angle

Use your remote control within the distance and angle range shown below.

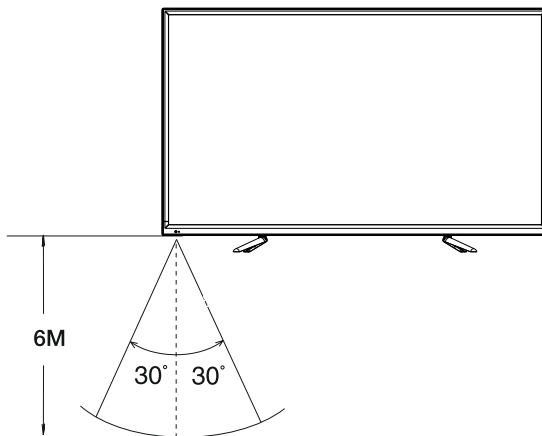

Learning about Remote Control

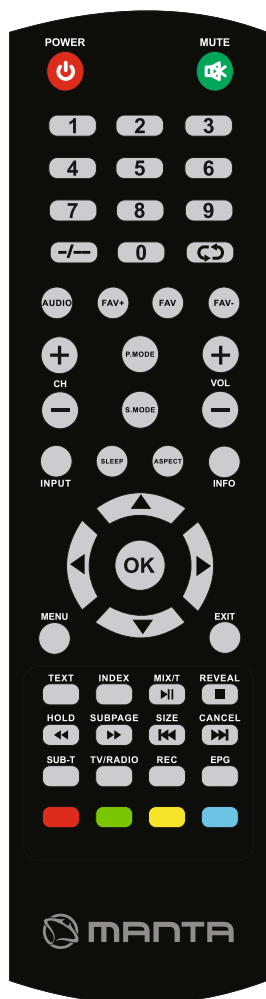 

POWER: Press the TV on and standby.

MUTE: Press to mutes the sound.

NUMBER: Numeric buttons for direct channel access.

-/-- : Call up the program table.

↶↷ : go back to the last viewed channel .

AUDIO: Switch the audio channel in DVD or multimedia mode.

FAV: Press to display the favorite channel list which you stored before.

FAV+ or FAV-: Scans up or down through the current favorite channel list.

CHANNEL “+” “-”: Press to change the TV channels.

VOL “+” “-”: Press to increase or decrease the volume.

P.MODE: Press to select the picture mode.

S.MODE: Press to select the sound mode.

SLEEP: Press to select a preset time interval for automatic shut off.

ASPECT: Aspect Ratio .

INPUT: Accesses the available input channels, Use the arrows to highlight options, and press OK to select.

INFO : Displays the current input information.

◀▶▲▼ : Use to select on-screen menu items and change menu values.

OK: Enter and conform button.

MENU: Press to display the OSD menu.

EXIT: Exit the menu

TEXT: To enter Teletext mode

INDEX: To display the index page

MIX: TV and TXT picture are mixed together in transparent background.

REVEAL: Teletext mode-To reveal or hide the hidden words.

HOLD: Teletext mode-Hold current page which is displayed.

SUBPAGE: Sub coded page access.

SIZE: Change the size of display in Teletext mode.

CANCEL: To cancel the display.

▶||: PLAY/PAUSE

■: STOP

◀◀: Fast return key

▶▶: Fast forward key

◀◀: Previous key

▶▶: Next key

SUB-T: Select sub-title of media video file.

TV/RADIO: When watching a channel, allows you switch between TV and Radio modes.

REC: Presonal video record button.

EPG: Shows Electronic Program Guide.

Colour buttons: Channel Edit

Basic Operations

Turning On and Off

Connect the AC cord to power the TV. At this time the TV will enter standby mode and power indicator will turn red.

Use Power button (⏻) on the side panel of TV or on the remote control to turn on the TV. After switching off the TV for 5 seconds, you can turn on TV again.

Select Input Source

Press **INPUT** button to display the input source list. Press ▼ / ▲ or **OK** button to select the input source you want, Press **OK** button to enter the input source, Press **EXIT** button to quit. (Options:DTV,ATV,AV, Component,HDMI1,HDMI2,HDMI3, Smart TV , Media)



Basic Operations

First Time Settings

Connect an RF cable from the TV's input called "ANT IN" and to your TV Aerial socket.

 
Language

select the language to be used for menus and message.

Country

Press ◀ / ▶ button to select the country.

Press OK button to enter Tuning Setup menu, use the Arrows buttons to select tune type.

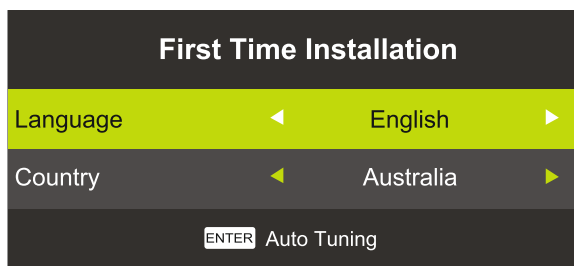

Tuning Setup

 
First analog channels are tuned and then digital channels. Press Menu button to skip tuning.



Main Menu Operation

CHANNEL MENU

Channel menu is used for channel searching and edit, it's only available in TV input. Press MENU on the remote. Select CHANNEL from the Main menu. Press the OK button to proceed to CHANNEL menu.

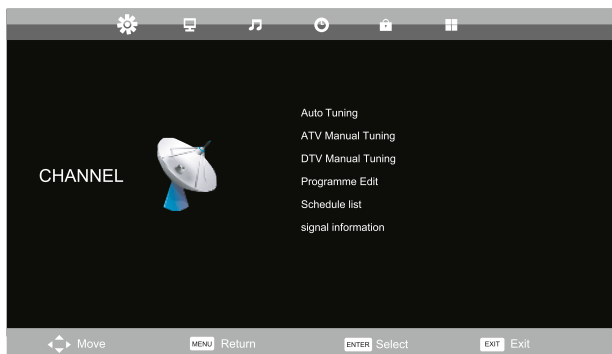


Auto tuning

Search channel automatically. You can stop searching with MENU button.



ATV Manual tuning

 Search channels manually. You can customise the color/sound system, frequency of channel.

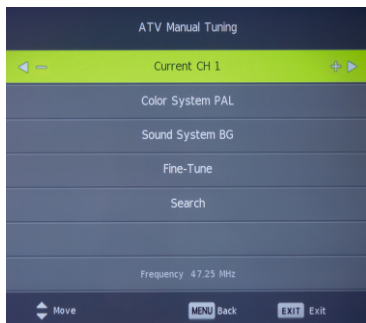

Current CH
Set the channel number.

Color System
Select the color system
(Available System: AUTO,PAL , SECAM)

Sound System
Select the Sound system

Fine-Tune
Adjust the frequency of the channel finely.

Search
Start searching channel.

Main Menu Operation

 
DTV Manual Tuning

Press ▼ / ▲ button to select DTV Manual Tuning, then press **OK** button to enter .



Program Edit

Press ▼ / ▲ button to select Program Edit, then press **OK** button to enter sub-menu.

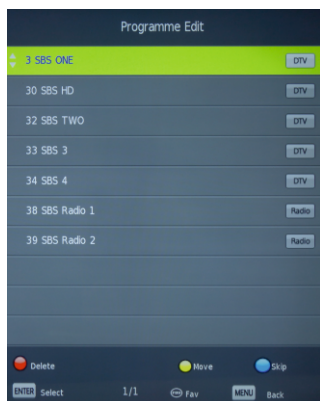

The three colored key is the shortcut key for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:
Press the **Red** button to delete the selected program in the list.
Press the **Green** button to enter the rename. (Rename is only available for Analog channels)
Press the **Yellow** button to move the channel in favorite list.
Press the **Blue** button to skip the selected channel.
Press Fav button to add or remove the channel to your favorite list.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Schedule List

Show the Schedule list, it is available under DTV source.

Signal Information

Press ▼ / ▲ button to select **Signal Information**, press the **OK** button to see the detail information about the signal. Only available when there is signal in DTV.

Main Menu Operation

Electronic Program Guide(EPG)

EPG TV guide (for DTV mode only)

EPG stands for Electronic Program Guide. It is supplied by the program providers and offers information about the programs to be broadcast. You can access it in digital mode by pressing the EPG button on the remote control.

7 Day TV GUIDE

09:15 - 10:03 07 Dec 2005

Movie/Drama

Likainen Len. Mike tutkii, onko maatyöläisen kuolemalla yhteyttä lukuisiin eläinten kuolemiin.

Alfred saattaa Davidin nousuveden vangiksi. Stereo.

07 Dec 2005 09:35:14

07 Dec 2005

1 YLE TV1	09:15-10:03	Sydämen asialla	Now
2 YLE TV2	10:05-10:13	No Information	Next
3 YLE FST	10:15-10:29	Koulu-tv: Näin tehtiin Ullakkokomppania	
4 YLE24	10:30-10:58	No Information	
5 YLE Teema	11:00-11:04	Tv-uutiset	
	11:05-11:26	No Information	
	11:30-11:58	FST: Elämäntaito	
	11:58-12:00	FST: Tate Modern: Eri ulottuvuudet	

Record

Remind

Move View

Prev Day

Next Day

Info

Details

EXIT

Exit

- Press the EPG button to display the EPG interface(above).The area at the top will display information about the selected program or channel,and the columns below will display the list of available channels and their programs at various time slots.
- Before you can view any EPG information, you have to activate every channel for which you want to view program information. To do this, use the ▲/▼ buttons to select a channel in the left column, then press OK to confirm.
- Press the ◀/▶ buttons to switch between columns.
- Press the ▲/▼ buttons to select a different channel/program in the list.
- Press the RECORD ● button to schedule a recording for the selected program.
- Press the GREEN ■ button to schedule a reminder for the selected program.
- Press the YELLOW ■ button to display the TV guide of the previous day.
- Press the BLUE ■ button to display the TV guide of the next day.
- Press the INFO button to display details information.
- Press EXIT to exit the EPG menu.

Time Shift(FOR DTV MODE ONLY)

Insert your USB memory device into USB slot first.

When watching digital programs,press T-SHIFT button to enable TIMESHIFT function. (Note:USB memory device must be connected for this function)

 


Press ◀/▶ navigation button to select desired option. Press the OK button to confirm selection. If the tool bar disappears, press EXIT button on remote control to display it again. Press the ■ button to stop recording.

Main Menu Operation

PICTURE MENU

Picture menu is used for TV picture effect adjusting. Press MENU on the remote. Select PICTURE from the Main menu. Press the OK button to proceed to PICTURE menu.

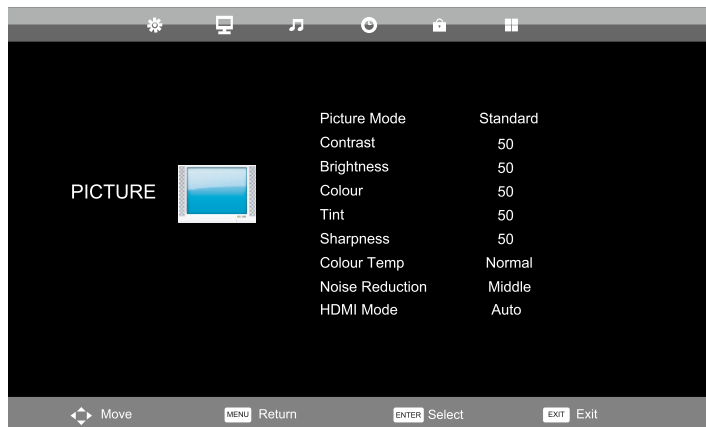

Picture mode

select the preset picture mode. You can also switch the mode via PMODE button on remote control. You can only adjust the contrast, color, brightness and tint in User mode.

Contrast

Adjust the contrast of TV display.

Brightness

Adjust the brightness of TV display.

Colour

Adjust the color saturation of TV display.

Tint

Adjust the tint of TV display. Only available in NTSC channel.

Sharpness

Adjust the sharpness of Picture. This function is not available in PC mode.

Color Temp

Adjust the color temperature of TV display. Set the TV picture display from colder to warmer.

Noise Reduction

Adjust the noise reduction level of TV display.

 
HDMI Mode

Select HDMI Mode to Auto, Video and PC.

Main Menu Operation

SOUND MENU

Sound menu is used for TV sound effect adjusting. Press MENU on the remote. Select SOUND from the Main menu. Press the OK button to proceed to SOUND menu.

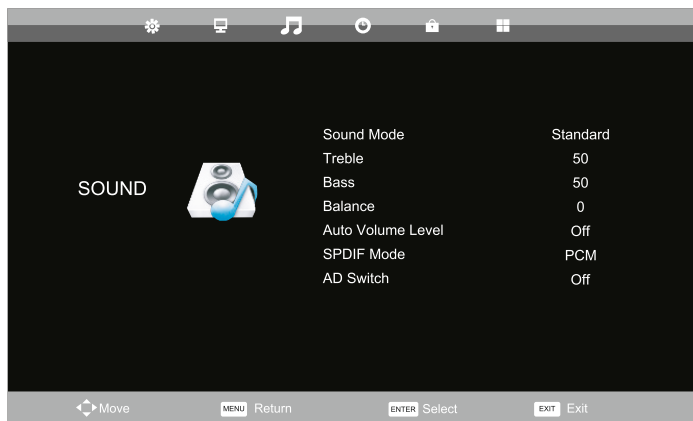

Sound mode

Select the preset Sound mode. You can also switch the mode via SMODE button on remote control. You can only adjust the treble and bass in User mode.

Treble

Adjust the treble level of TV sound.

Bass

Adjust the bass level of TV sound.

Balance

Adjust the speaker's output, it enables you to listen to best at your position. Press ▼ / ▲ button to select option, Press ◀ / ▶ button to adjust.

Auto Volume level

reducing the difference between channel and program's volume automatically. Press ▼ / ▲ button to select Auto Volume Level, then press ◀ / ▶ button to select On or Off.

SPDIF Mode

Press ▼ / ▲ button to select SPDIF Mode, then press ◀ / ▶ button to select Off / PCM / Auto.

 
AD Switch

Enter the Audio Description Switch sub-menu, select this option to adjust AD volume.

Main Menu Operation

TIME MENU

Time menu is used for TV sound effect adjusting. Press MENU on the remote.
Select TIME from the Main menu. Press the OK button to proceed to TIME menu.

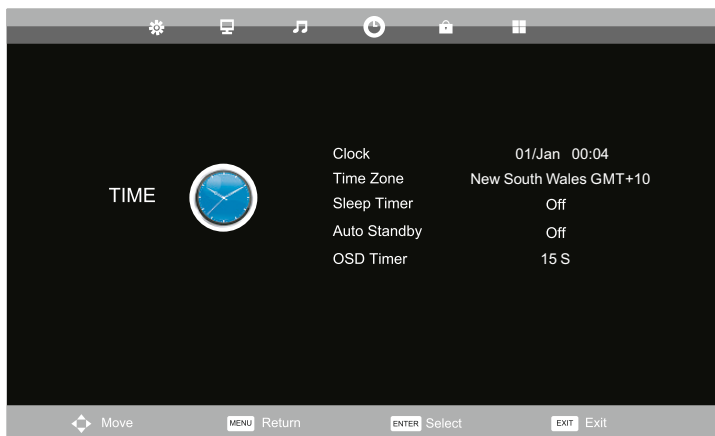

Clock

Set the TV clock.

Time Zone

Showing the country's time zone.

Sleep Timer

Set the sleep timer counting down.

Auto Standby

When you turn this on, the TV will sleep automatically after a period of no-operation time.

 
OSD Timer

Set the OSD displaying time.

Main Menu Operation

LOCK MENU

Time menu is used for TV Lock effect adjusting. Press MENU on the remote. Select LOCK from the main menu. Press the OK button to proceed to lock menu.

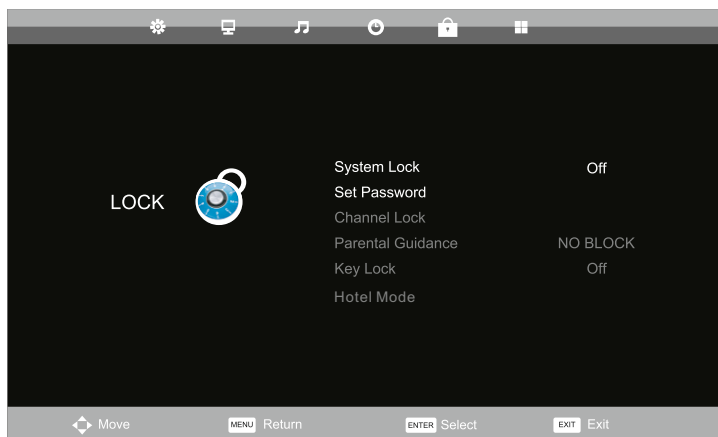

System Lock

press OK button to enter, input password, default password is 0000.

Set Password

To set your own password, first enter the old password, and then enter your new password twice.

Channel Lock

To enter "Channel Lock" menu, select the program you want to, then press the "Green" button to lock or unlock the channel.

Parental Guidance

You can set the parental control function to suit viewing for children of all ages. Choose the categories in the sub menu.

Key Lock

You can set to lock or unlock the keypad.

 
Hotel Mode

Choosing the ▲ / ▼ select the menu item Hotel Mode, then go to the sub-menu, press ENTER to enter the sub-menu and activate the selected item:

Main Menu Operation

SETUP MENU

Option menu is used for TV additional options. Press MENU on the remote. Select Setup from the Main menu. Press the OK button to proceed to Setup menu.

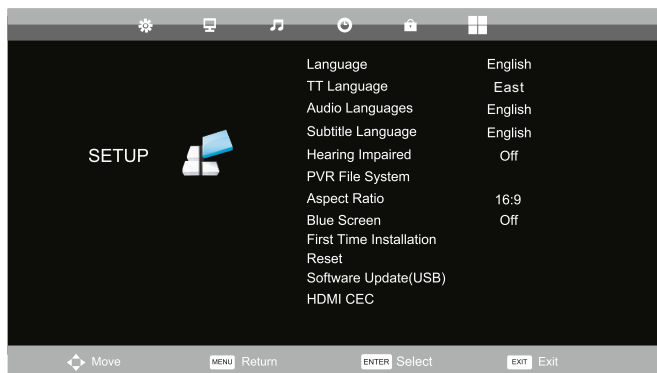

OSD Language

Select your desired OSD language.

TT Language/Audio Language/Subtitle Language

Select your desired teletext language /the primary audio language /the primary subtitle language.

Hearing impaired:

This function is for the Hearing Impaired, when the status is on, you can see subtitles in the programs.

PVR File System:

To Check and format your USB Disk to be compatible with the PVR file system of this model.

Aspect Ratio

To select between the available modes: Auto, 4:3, 16:9, Zoom1and Zoom2.

Blue Screen

To turn the blue screen on/off. If the Blue Screen is turned on, the TV will display a blue background when there is no signal input.

First Time Installation

To set relevant options, including OSD language, country and tuning.

Reset

Press OK button to enter a dialogue, select Yes to restore factory default.

Software Update (USB)

Update the firmware of this model. (Contact customer service to see if an update is available.)

Main Menu Operation

HDMI CEC

Consumer Electronics Control(CEC) allows you to control multiple CEC-enabled devices connected using HDMI, with a single remote control.

Press ENTER button to enter sub-menu.

CEC Control: Turn on or off the HDMI CEC function.

Device Auto Power on: Turn on or off the device auto power.

TV Auto Power on: Turn on or off the TV auto power.

Device List : Show device list.

Device Menu: Open the main menu of device.

Audio Receiver

Press to turn ARC ON or OFF. Audio Return Channel (ARC) returns audio through the same HDMI channel that is used to send video to the TV. If switched on, you won't need a separate audio cable to return sound from the TV. ARC Feature is available on HDMI 1 only.

HDMI CEC	
CEC Control	On
Audio Receiver	Off
Device Auto Power Off	Off
TV Auto Power On	Off
Device List	
Device Menu	
MENU Back	

Main Menu Operation

PVR File System

To Check and format your USB Disk to be compatible with the PVR file system of this model. Select "Check PVR File System" to check your USB Disk. Select "Format" to format your USB Disk to be compatible with this model. Select "Free Record Limit" to set the record limit for your USB Disk.

Select Disk	C:
Check PVR File System	SUCCESS
USB Disk	Pass
Format	Pass
Time Shift Size	All
Speed	SD FAIL 0 KB/S
Free Record Limit	6Hr.
ENTER Select	MENU Back

IMPORTANT NOTE:

For any type of recording with this television, you must have plugged a USB device into the appropriate USB port at the back of the television to record on.

- 1.Please insert the external high-speed storage devices, insert must be formatted before.
- 2.Select the DTV program and channel you wish to record.
- 3.Press [REC] button to enter PVR mode and start recording. PVR control bar on the screen shown below. You can select the appropriate settings required. You could change the mode of Recording menu by OK button.
- 4.If you wish to stop the recording, press [■] button and the recording will stop.

Instant one-touch recording and playback

In DTV mode and with a USB device properly plugged in, press the REC button on the remote control to activate the PVR function for instant recording of the channel you are watching. Press [■] button to stop recording,

Select the schedule list in channel menu and press OK to enter schedule list, then use left or right button to select recorded list.

◀ Recorded List ▶			
■■■■■■■■■■ (39% Used) 04:43 16 Dec			
1/1	Programme Title	Date	800 BBC ONE
1	Entertainment	13/12/2012	Planet Earth Live: A Lion's Tale
			04:56:29 (00:07:20)
			2/5. Wildlife documentary telling the story of Moja, a five-month-old lion cub living with his single lioness mum, Nyota, in Kenya's Masai Mara. Together, they face a fight for life. Also in HD. [S]
◀ Move ● Delete ENTER Play EXIT Exit			

Display the recorded list

RED button: Delete the program you select.

OK button: Play the program you select.

Media Operation

Note: Before operating **Media** menu, plug in USB device, then press INPUT button to set the Input Source to **Media** .
Press ▼ / ▲ button to select **Media** in the Source menu, then press **Enter** button to enter.



Press ◀ / ▶ button to select the option you want to adjust in the main **Media** menu, then press **Enter** button to enter.

Playable file formats:avi,mpg,ts,mov,mkv,dat,mp4,vob,mp3,m4a,bmp,png,jpg,jpeg.....


External USB maximum size possible: 2T

Media Operation

Photo Menu


Press ◀ / ▶ button to select PHOTO in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

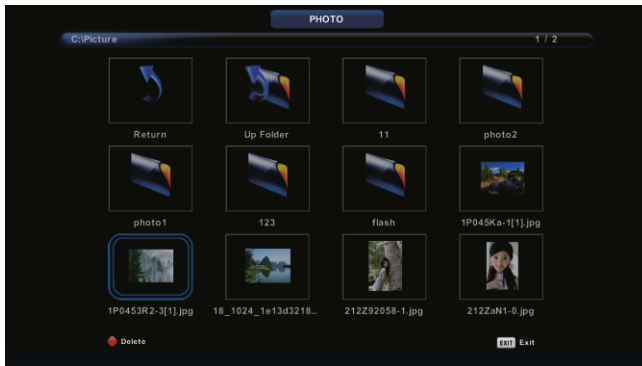

Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.

 When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

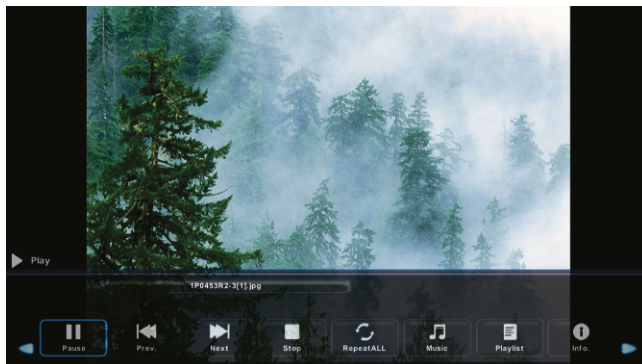


Media Operation

Music Menu



Press ◀ / ▶ button to select MUSIC in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

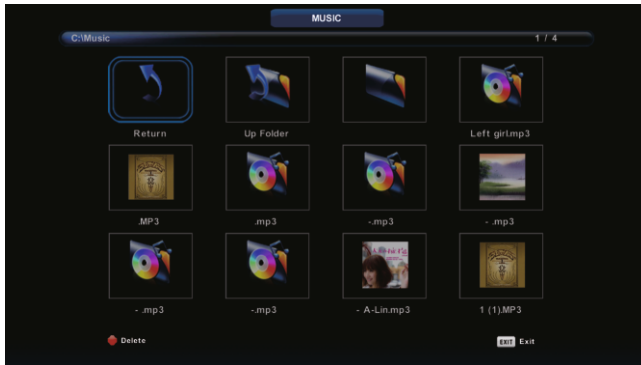

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

  Press ◀ / ▶ button to select return option to the previous menu.

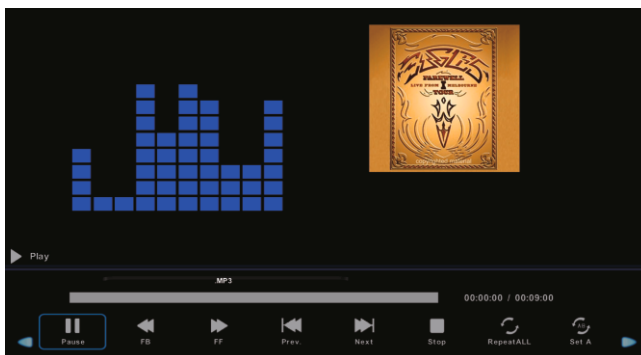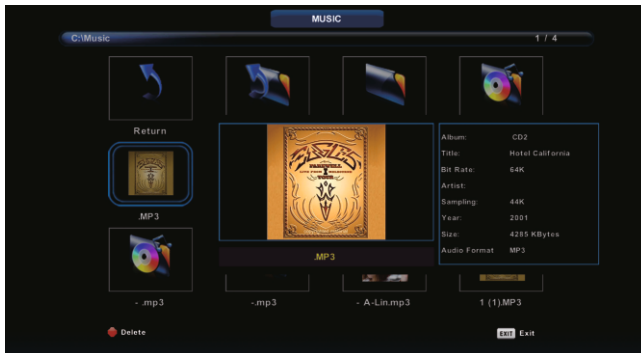


Media Operation

Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

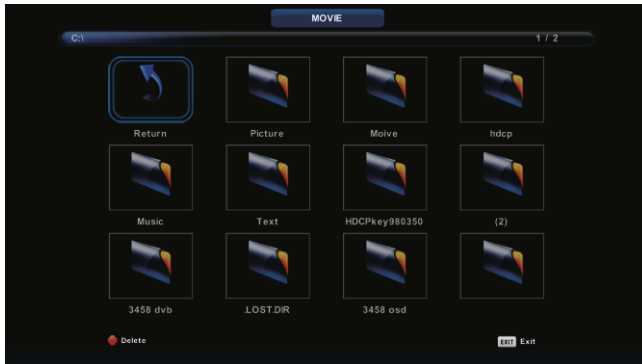


Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **Enter** button to operate.

 Press **Exit** button to back to the previous menu and exit button to quit the entire menu.

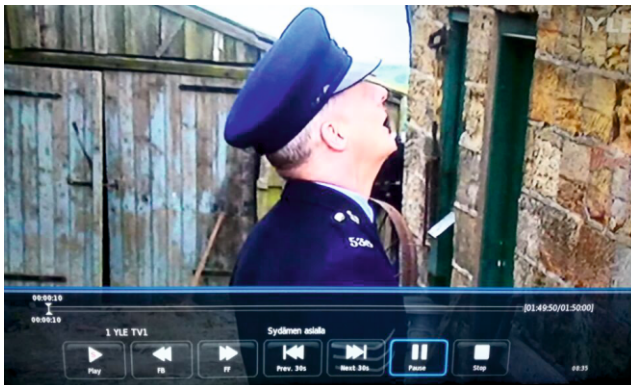

Media Operation

 
Text Menu

Press ◀ / ▶ button to select TEXT in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press ◀ / ▶ button to select return option to back to the previous menu.

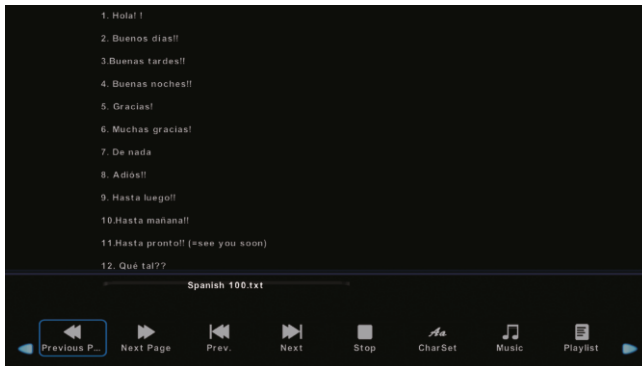

Help

No Power	Check the AC cord of TV is plus in or not. If still no power, please pull out the plug and replug in after 60 seconds. And open the TV again
Signal receive not properly	<ul style="list-style-type: none"> ● To cause double image or phantom if there has high building or high mountain round TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. ● If you use the indoor antenna, under certain circumstance, receive will be more difficult. So you can change the direction of the antenna to adjust the image effect. If can't change image receiving effect either, you have to use external antenna.
No picture	<ul style="list-style-type: none"> ● Check the antenna at the back of TV is connected properly or not. ● Try to select other channels and check whether the TV problem itself or not
but, Video is ok without audio	<ul style="list-style-type: none"> ● Increase the volume. ● Check the TV is in mute mode or not, and please press the mute button to make sound resume.
Audio is ok, but color error or no picture.	<ul style="list-style-type: none"> ● Increase contrast and brightness.
snow statics picture and noise	<ul style="list-style-type: none"> ● Check the antenna at the back of TV is connected or not.
Level broken line	<ul style="list-style-type: none"> ● vacuum, such as hair drier, Maybe has electrical appliance interfere- please turn off these kinds of electrical appliance, cleaner and so on.
Image or-Dual "simulacrum" The TV no response with the Remote.	<ul style="list-style-type: none"> ● Perhaps the location for the antenna is not good. Use the tall beamed antenna can be improved quality of the display image. ● Operate the remote direct to the remote sensor on the TV. If still no response for the TV, please check if the plastic bag on the remote take or not. And check if the location for the battery is correct. Change the new battery. ● The TV will shift to the STAND BY if no response from the remote in the few minutes.
.NO Video In (PC Mode)	<ul style="list-style-type: none"> ● Please check if the display cable connect to the VGA correcte. ● Please check if there has the bend on the display cable.
Vertical twinkling (PC Mode)	<ul style="list-style-type: none"> ● Enter the main menu, Use the clock regulator for the Video display noise to eliminate the vertical line.
horizontal ripping (PC Mode)	<ul style="list-style-type: none"> ● Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	<ul style="list-style-type: none"> ● Adjust the contrast ratio or brightness in the main menu.
PC Function no response	<ul style="list-style-type: none"> ● Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	<ul style="list-style-type: none"> ● Please use good quality connecting cable.
Problem still exist	<ul style="list-style-type: none"> ● Unplug the power cable and wait for 30 seconds, then connect. If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

There will be complete picture and the brightness will come down if the TV is in: Note So please do not keep the TV in a state of same, the static picture for too long time Menu or same picture that has much difference in brightness and contrast ratio for too long time.

Product fiche

LED95501

- Supplier's name: Manta S.A.
- Supplier's model: LED95501
- Energy efficiency class: A
- Visible screen diagonal in centimetres and in inches: 140cm;55"
- On-mode power consumption: <110 W
- Annual energy consumption: 161 kWh/year
- Standby and off-mode power consumption: <0,5 W
- Screen resolution in physical horizontal and vertical pixel count:
3840x2160

Note!

Product design and Technical parameters may be change without notice. This mainly concerns parameters technical, software and user manual present. User's Manual is a general orientation on service product. Manufacturer and distributor do not assume any responsibility as compensation for any inaccuracies errors in the descriptions appearing in this user manual.