



mANTRA

LEDTV

LED94901S

Instrukcja obsługi / User's manual


CAUTION**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personal.

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.

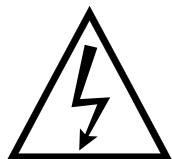

Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


Important Safety Precautions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Warning to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
16. The socket-out shall be installed near the equipment and shall be easily accessible.
17. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
18. Apparatus shall not be exposed to dripping or splashing.
19. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
20. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
21.  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
22. The USB terminal should be loaded with 0.5 A under normal operation.


TV Bracket assemble

Fix the TV on the wall


- 1.First,put the TV on the table smoothly and put some soft cloth on the table to avoid scratching the screen.
- 2.User the screw driver to take off the screws which are fixed on the bottom stand (the direction of the arrow, refer to the photo1).And take off the bottom stand(please take off the screws and bottom stand carefully).
- 3.Make one bracket which can fix on the wall according to the size of arrow direction of photo2 and photo3.
- 4.Drill four holes properly on the wall (the size only for reference) and put into four screws.(optional parts) Drill four holes properly on the wall (the size only for reference) and put into four screws.(optional parts)
- 5.according to the step 4,use the screwdriver to lock the screw on the back of the TV.
then hang the TV on the wall.

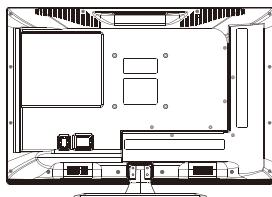


1

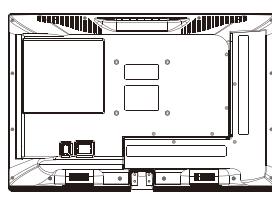

2

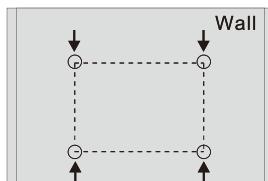

3

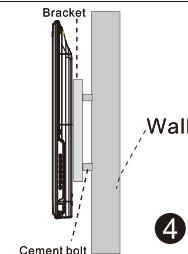

4

Note:

- 1.The bracket fixed on the wall is optional part.
- 2.when you assemble the TV, there should be no other articles on the around and front and please keep the distance from other articles.
- 3.When assemble the TV, please ask the career man to fix in order to avoid the danger.
- 4.The fixing picture is only for reference.
- 5.Please follow the use manual about bracket assemble to fix the TV.
- 6.Attach the mounting bracket from the VESA compatible wall mounting kit.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



P:Turn ON/OFF Power.

INPUT:External Signal Input Selection.

MENU:Display Main MENU And Confirm MENU Item Selection.

CH+/-:Selecting Channel.


VOL+/-:Adjusting Volume.

Terminal Interface



Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

SCART	SCART input standard,it supports composite and RGBsignal input.It is a connection for european (Some models without this interface)	VGA	VGA input PC analog signal input
COAX	COAX Digital TV sound output.	PC AUDIO	PC AUDIO Connect the Audio output jack of PC.
USB	USB input Connect a USB device here to play its media files or to recordprograms via the PVR function.	RF	RF: Connect the antenna.
HDMI	HDMI input Digital signal input from HDMI video connector.	AV(MINI)	AV input External AV Signal Input And Relevant Rith/Left Sound Channel
LAN	LAN:Connect the internet.	CI	CI The card reader input CI(common interface) this requires CAM (conditional access module) used for pay TV.
		YPBPR(MINI)	Y Pb Pr input Connect to the composite terminal of your DVD/VCR (Some models without this interface)

External device connection diagram

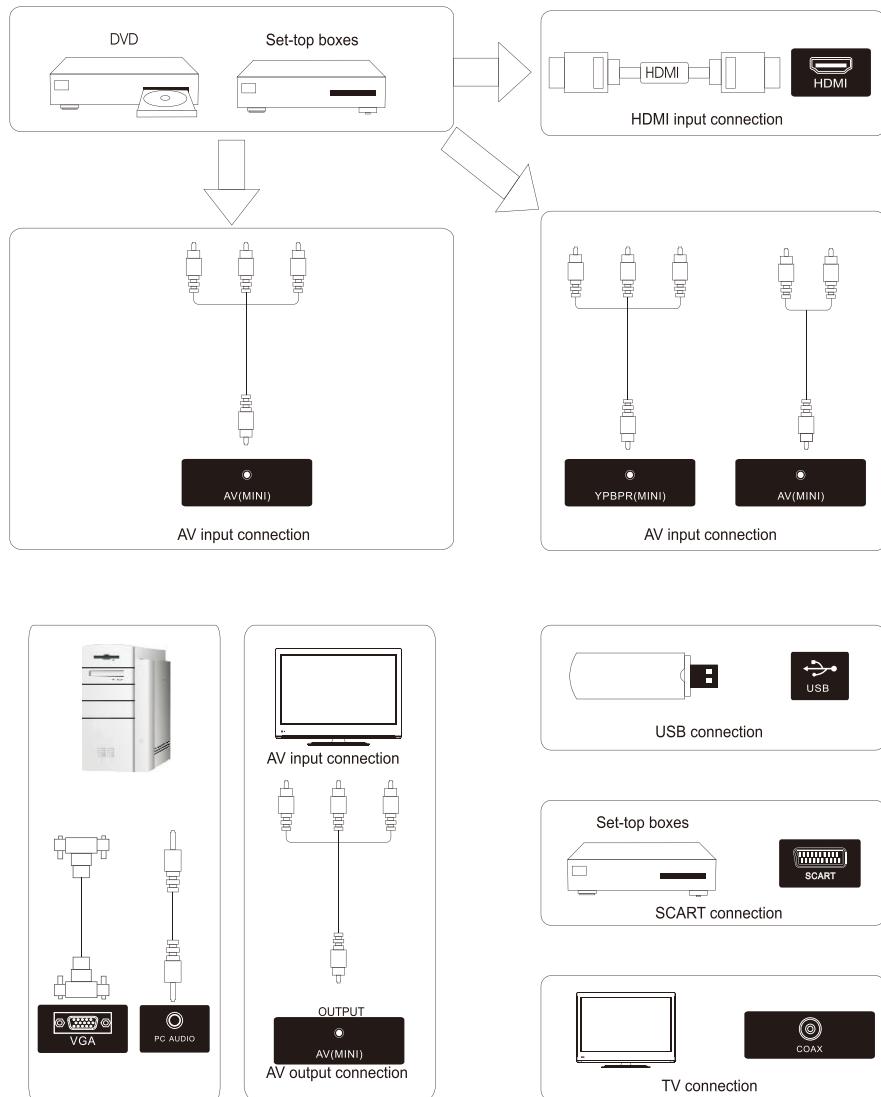

Install and connect TV

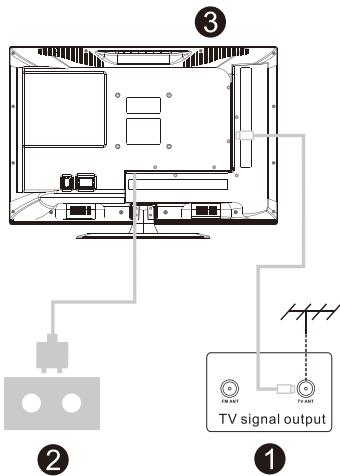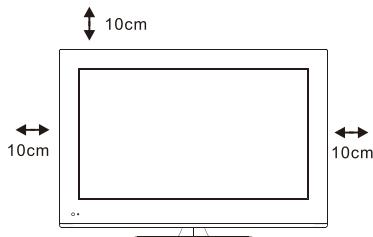

Set your TV

To put your TV in a firm place which can bear the weight of the TV.

To avoid danger, please don't expose the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

Turn on TV

3. Press the power button of the TV the indication light will turn to green. if it is on standby mode (the light is red),press the power button on the remote control to turn on the TV.


Note:

Picture for reference purposes only.

TV Stand Installation Instructions

- 1- Place the stands into their own slots under the device.

- 2- Fasten the stand to the device with screw.

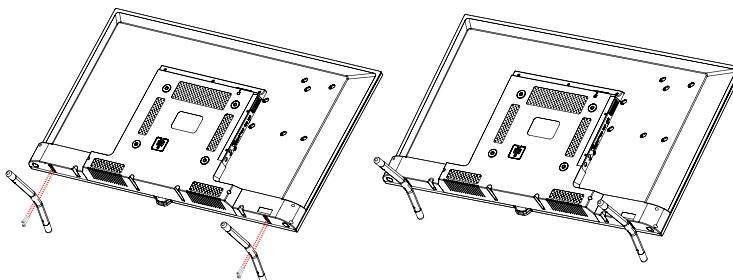

Note:

Picture for reference purposes only. Please prevail in kind



Remote Control Buttons

- POWER (⊕)**: Turns the TV on or off.
- MUTE (🔇)**: Reduces the TV volume to its minimum level. Press again to restore the volume.
- NUMBER BUTTONS**: Press 0-9 select a TV channel directly when you are watching TV.
- “-/-”**: To switch the channel digit.
- Recall (⌚)**: Returns to the previous channel.
- AUDIO**: Switch the audio channel in DVD or multimedia mode.
- FAV-./FAV+.**: Scan up or down through the current favorite channel list.
- FAV**: Adds the current channel to your favorite list, or erases the current channel from your favorite list (if this channel is a favorite channel already).
- CH+ or CH-**: Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels.
- VOL+ or VOL-**: Increases or decreases the TV volume.
- P.MODE**: Switches between the preset picture mode.
- S.MODE**: Switches between the preset sound mode.
- INPUT**: Press to select signal source.
- SLEEP**: Selects the sleep timer, after which the TV will shut off automatically.
- ASPECT**: Switches between the preset screen size mode.
- INFO**: Press to display the current program information on the screen.
- Arrows (◀/▶/▲/▼)**: Uses the four arrows to highlight different items in the TV menu or change the value.
- OK**: Enter and confirm button.
- MENU**: Accesses the Main Menu, or return to the upper level of a sub-menu.
- EXIT**: Exits the current menu or function.
- TEXT**: To enter Teletext mode.
- INDEX**: To display the index page.
- MIX**: TV and TXT picture are mixed together in transparent background.
- REVEAL**: Teletext mode-To reveal or hide the hidden words.
- HOLD**: Teletext mode-Hold current page which is display.
- SUBPAGE**: Sub coded page access.
- SIZE**: Change the size of display in Teletext mode.
- CANCEL**: To cancel the display.
- T-SHIFT**: Press to activate Time Shift function in Digital TV mode, for delayed viewing.
- TV/RADIO**: Switch between TV and RADIO.(Used for models with DTV function only)
- REC**: Personal video record button.
- EPG**: Shows Electronic Program Guide(use in the DTV mode).
- ◀▶**: Fast review and fast forward.
- ◀▶**: Select the previous or the next media file.
- RED/GREEN/YELLOW/BLUE**: Use add-on functions in OSD menu.

NOTE:

- ◆ All pictures in this manual are examples, only for reference, actual product may differ from the pictures.
- ◆ The buttons not mentioned here are not used.

Ratiomode:


Anysignalsource,pressthe"proportion",youcanchangetheratiooftheimage.

Sleep timer function:

The machine is running, under no circumstances can "sleep" button, you can go to sleep settings, sleep mode current options are: Off, 15 minutes, 30 minutes, 45 minutes, 60 minutes.

Switching of the source:

After the system starts properly, press the remote control [Source] key, press the "Up/ Down" to select the source you want to enter, then press the "OK" button to enter the corresponding signal path.

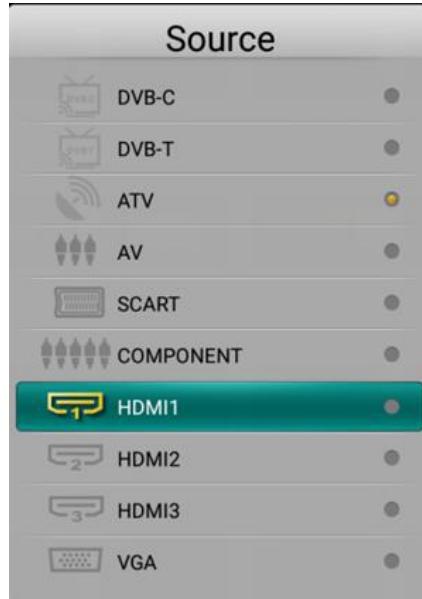**Menu:**

Press the MENU key to display the menu settings interface.

Press the MENU key to display the menu settings interface:

In the TV signal source, press the number keys to quickly enter the selected channel.

In the "Movie", under the File menu, press the number keys to quickly reach the selected file.

OSD function:

Anysignalssource,pressthe"INFO"buttonwilldisplayinformationaboutthecurrent sources,suchasunderthe"TV"showsthechannelnumber,colorssystem,soundformats,etc., "themovie"Underthecurrentlyplayingfileinformationdisplay,otherchannelsdisplaysthe currentinputsignalinformation.

Programlist:

IntheTVsignalsource,press"LIST"listtодisplaytheprogramlist.


3. Main menu operation

OntheremotecontrolPress[Menu]buttontodisplaythemainmenuby ▲ / ▼ keystomove toselectasub-menutobeset,press ► buttontoenterthesub-menu,press ▲ / ▼ keysto movetoselectthesubprojectyouwanttoset,thenpressOKtoenterthesetting.

Note:adifferentinputsource,themainmenuitemyoucansetdifferent.

3.1 Image Settings

OntheremotecontrolPress[MENU]buttontodisplaythemainmenuvia ▲ / ▼ keys tomovetoselect[ImageSettings]submenu,press ► buttontoenterthesub-menu,press ▲ / ▼ keystomovetoselectthesubprojectyouwanttoset,thenpressOKtoenterthesetting.

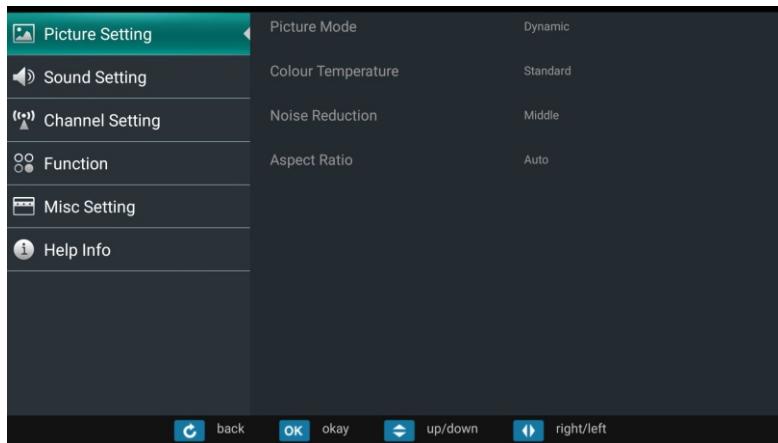

3.1.1 Picture Mode

Thisoptioncanbesettotheimagedisplaymode,by ▲ / ▼ keystomovetoselectthe contrast,brightness,sharpness,saturation,colortemperature,noisereduction,scalemodeand thenpressOKtoenterthesetting.

3.1.2 Contrast

Thisoptionsetsthescreendisplaycontrasttoadjustthecontrastbynumericalsize ▲ / ▼ button.

Note:Thisfeatureisonlyavailableincustomimagemode[USE]whilebeforeuse.

3. 1. 3 brightness

Thisoptioncanbesettodisplaybrightnesstoadjustthebrightnessofthenumericalsize
by◀ / ▶button.

Note:Thisfeatureisonlyavailableincustomimagemode[USE]whilebeforeuse.

3. 1. 4 Clarity

Thisoptioncanbesettodisplaysharpnesstoadjustthesharpenessnumericalsizeby
button. ◀ / ▶

Note:Thisfeatureisonlyavailableincustomimagemode[USE]whilebeforeuse.

3. 1. 5 saturation

Thisoptioncanbesettodisplaysaturationtoadjustthecolorsaturationbynumericalsize
▶ button. ◀ /

Note:Thisfeatureisonlyavailableincustomimagemode[USE]whilebeforeuse.

3. 1. 6 Color Temperature

Thisoptionsetsthecolortemperaturedisplaymode,by▲ / ▼keystomovetoselect
standard,Warm,Coolmode,thenpressOKtoenterthesetting.

Note:Thisfeatureisonlyavailableincustomimagemode[USE]whilebeforeuse.

3. 1. 7 Noise Reduction

Thisoptionenterswhispermodetoadjustthesizeofthenoisevalueby▲ / ▼key.

Note:Thisfeatureisonlyavailableincustomimagemode[]whilebeforeuse.

3. 1. 8 Ratio mode

Thisoptionsetsthecolorscalemode,by▲ / ▼keystomovetoselectZoom,thenpressthe
OKbutontoset.

Note:Thisfeatureisonlyavailableincustomimagemode[USE]whilebeforeuse.

3. 2 Sound Settings

OntheremotecontrolPress[MENU]buttontodisplaythemainmenuvia▲ / ▼keysto
movetoselect[SoundSettings]submenu,press▶buttontoenterthesub-menu,press▲ /
▼keystomovetoselectthesubprojectyouwanttoset,thenpressOKtoenterthe
setting.



3.2.1 Sound Mode

This option can be set to sound playing mode, \blacktriangleleft / \triangleright key to move to select balance, surround, automatic volume, sound mode, then press OK to enter the setting.

3.2.2 Balance

Option to adjust the balance of left and right channels, to adjust the size of the balance value by \blacktriangleleft / \triangleright button.

3.2.3 Surround

This option is the adjustable portion surrounded by \blacktriangle / ∇ key to set the SRS switch.

3.2.4 Automatic Volume

This option can be set to automatic volume control switch to select automatic volume by \blacktriangle / ∇ key control on or off.

3.2.5 Coaxial Mode


This option is used to adjust coaxial mode, the coaxial mode is set via \blacktriangle / ∇ key.

3.3 Channel Settings

On the remote control Press [MENU] button to display the main menu via
 move to select [Channel Settings] submenu, press ► to enter the submenu Press ▲ / ▼
 key to move to select the sub project you want to set, then press OK to enter the setting.

3.3.1 Auto Scan

This option for TV frequency range between 113MHz to 858MHz channels were seized Taiwan,
 effective channels will be saved automatically; in accordance with [EXT] Exit station search.

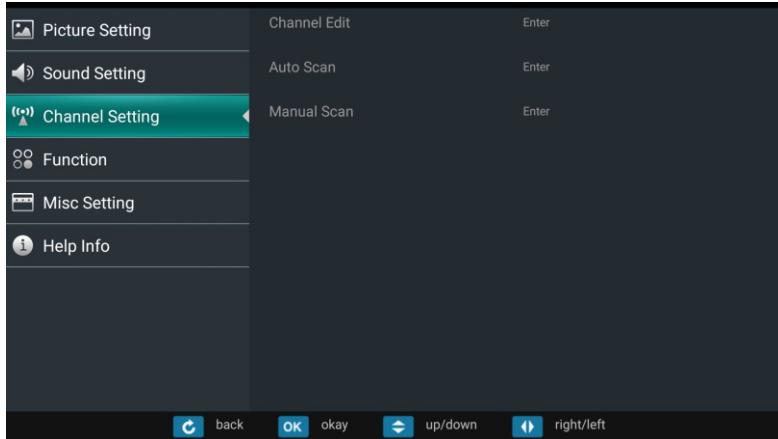

3.3.2 Manual Scan

This option can manually adjust the frequency of the TV channel frequency range between 113MHz to 858MHz on the search table, also press [EXT] exit station search.



3. 3. 3 CI Information

Select this option to press [ENTER] to view the CI card and information on the CI card settings.


**3. 3. 4 Language**

Select this option to press ▲ / ▼ button to set the audio language and graphic language.



3.3.5 LCN Setting

Select this option to press ▲ / ▼ key to set the LAN Settings switch.

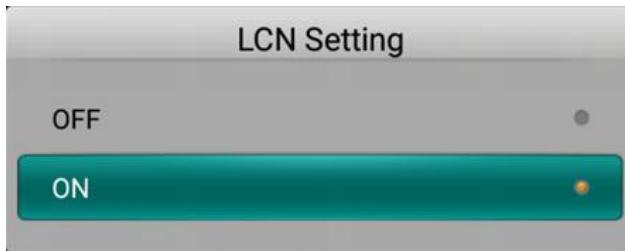**3.3.6 Schedule List**

Select this option to press ▲ / ▼ /button to select an appointment that has been set; the task; press the red button and yellow button to delete an existing job; green button can add new appointments or tasks; Enter key to select an existing job to edit.

Schedule List					2016-08-12 16:20
Channel	Start Time	Duration	Type	Mode	

Red button: Delete One | Yellow button: Delete All | Green button: Add | Enter button: Edit | Left arrow button: Move | Right arrow button: Return

3.3.7 PVR Setting

Select this option to press ▲ / ▼ key to set the Format or Test Speed. Select Disk to select when burning burn files stored in disk partitions; Format for the disk format operation; Test Speed to test disk access speed.

**3.3.8 PVR List**

Select this option to press ▲ / ▼ key to select the files have already been written, press the Enter key to play. Red key is used to delete the selected file.


PVR List

Number	File Name	Creat Time
--------	-----------	------------

 Delete  Select  Move  Return

3. 4 Function

On the remote control Press [MENU] button to display the main menu via $\blacktriangle / \blacktriangledown$ keys to move to select [Function] submenu, press \blacktriangleright button to enter, press $\blacktriangle / \blacktriangledown$ keys to move to select the sub project you want to set, then press [OK] to enter the setting.

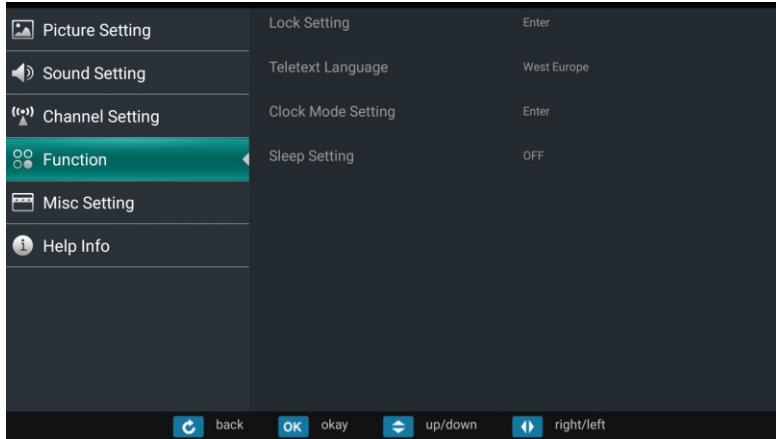

3. 4. 1 Lock Setting

This option to automatically adjust the screen display horizontal position, vertical position, etc. to achieve the most suitable display.

3. 4. 2 Teletext Language

This option to adjust teletext language by $\blacktriangle / \blacktriangledown$ key.

3. 4. 3 Clock Mode Setting

This option to adjust the clock mode, the $\blacktriangle / \blacktriangleright / \blacktriangle / \blacktriangledown$ keys to adjust the time.

3. 4. 4 Sleep Setting

This option to adjust sleep time to adjust the phase value by the size of the $\blacktriangle / \blacktriangledown$ key.

3.5 Misc Setting


On the remote control Press [MENU] button to display the main menu via
 move to select [Misc Setting] submenu, press ► button to enter, press ▲ / ▼ key to move
 to select the sub project you want to set, then press [OK] to enter the setting.



3.6 Help Info

On the remote control Press [MENU] button to display the main menu via
 move to select [Help Info] submenu, press ► button to enter, press ▲ / ▼ key to move
 to select the sub project you want to set, then press [OK] button to set.




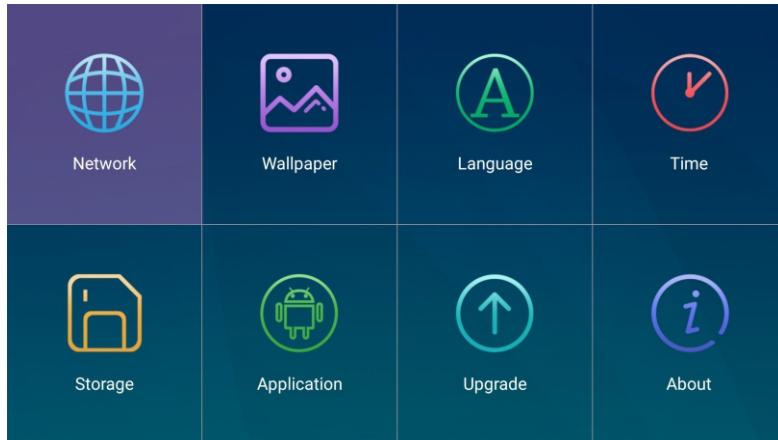

4.6.1 Theinternet


Users can according to the actual network, wired or wireless network connection related parameters.

WirelessLANsettingsareasfollows:

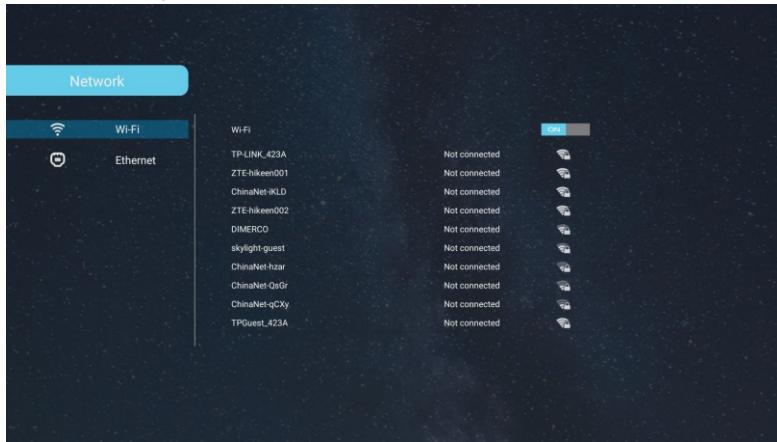


4.5 Application

This option enables users to add or default of some applications, where the user can click on a blank + Add new APP, you need to select the application by $\leftarrow / \rightarrow / \uparrow / \downarrow$ key to move.

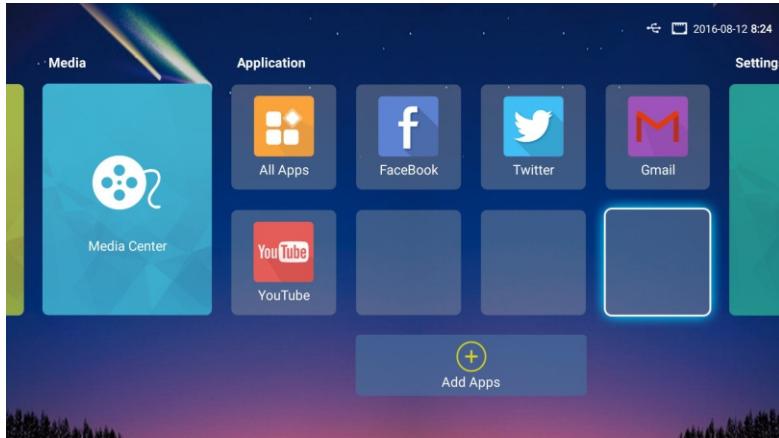


4.6 Set up

In the application page, selected by the $\leftarrow / \rightarrow / \uparrow / \downarrow$ key to move the settings page, and then press the OK button to enter the sub-menu, shown below:

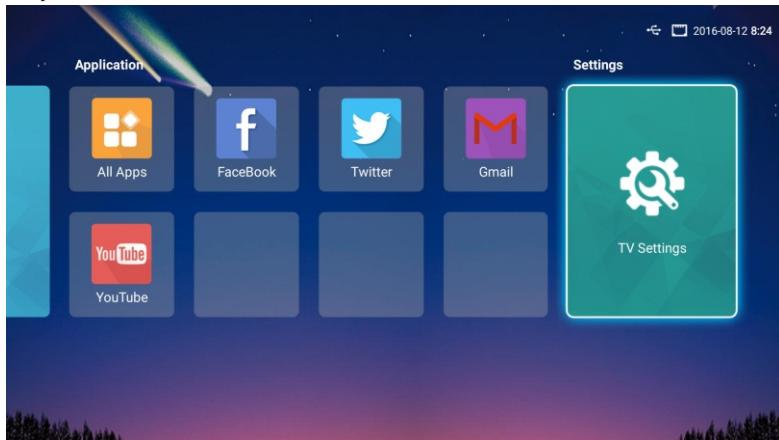

4. 4. 1 Media center

To select a different disk options by **◀ / ▶** keystomove, and then press the **OK** button, which can enter the media page. As shown below:

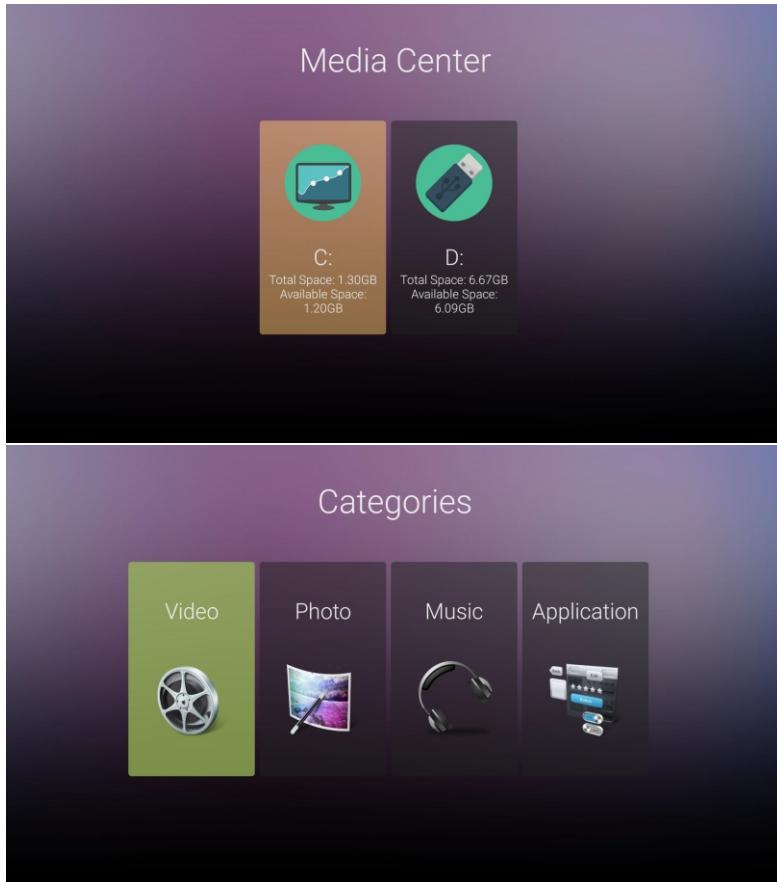**4. 4. 2 video**

This option can play files on the device USB, make sure USB disk connected.

4. 4. 3 image


[Photo] option to select by **▲ / ▼** keystomove, and then press the **OK** button, the player can enter the picture page.

4. 4. 4 music

To select the Music option by **▲ / ▼** keystomove, and then press the **OK** button, which can enter the music page.


4.3 Browser

Click to go to browser the Web Browser.

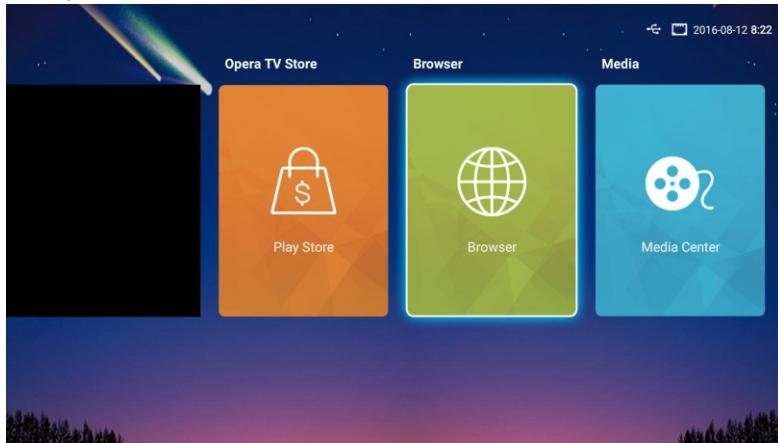

4.4 media

Click to go to Media Center to select the device.

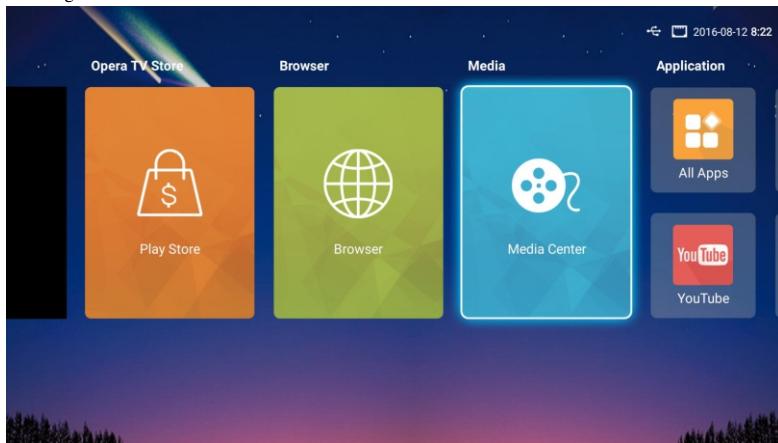


4. Home Operation

On the remote control Press [Home] key to display the homepage, through the ◀ / ▶ / ▲ / ▼ keys to move to select a sub-menu to set, then press the OK button to enter sub-menu

page.


4.1 TV Preview

This option is a preview of the channel signal display window through ▲ / ▼ keys to move to select your desired input signal source channel. For example, display analog TV signals in analog TV input source, the digital television signal input source is displayed digital TV.

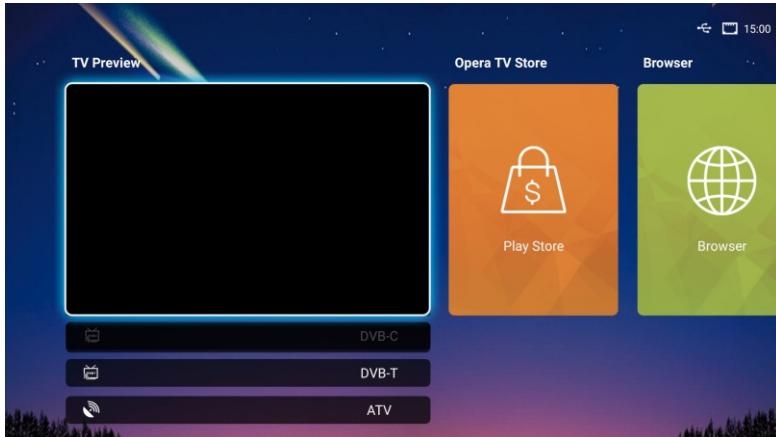


4.2 Application Market

Click to go to Google play store to download is seeking to APK.

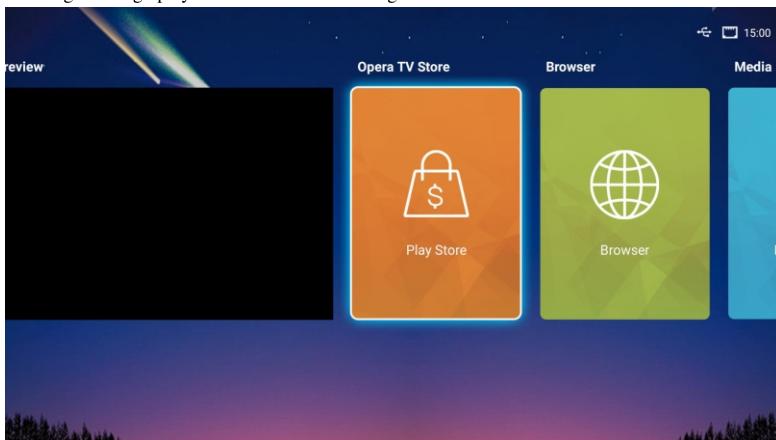


Wired network settings area as follows:

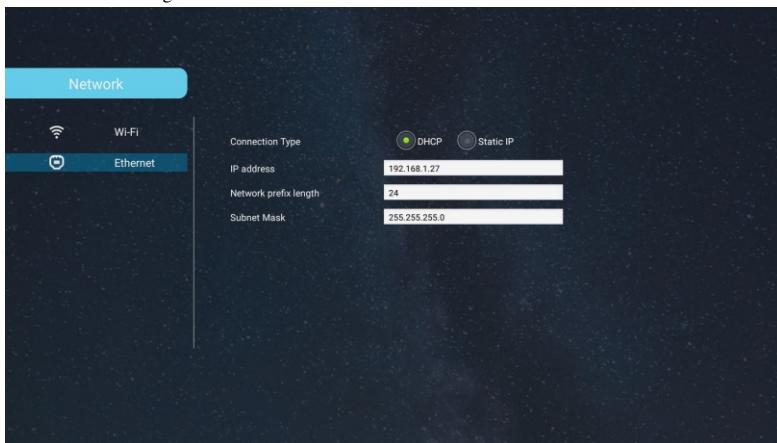

4.6.2 wallpaper


In this option, the user can set the wallpaper to your liking.

Wallpaper Settings menu area as follows:

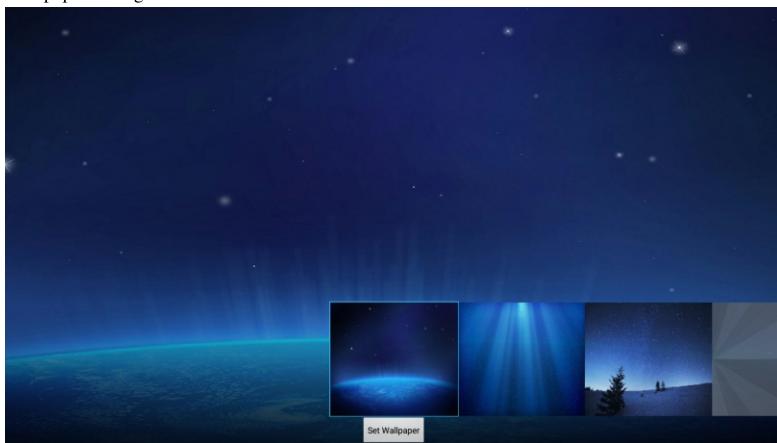

4.6.3 Language


The user can set the system display language

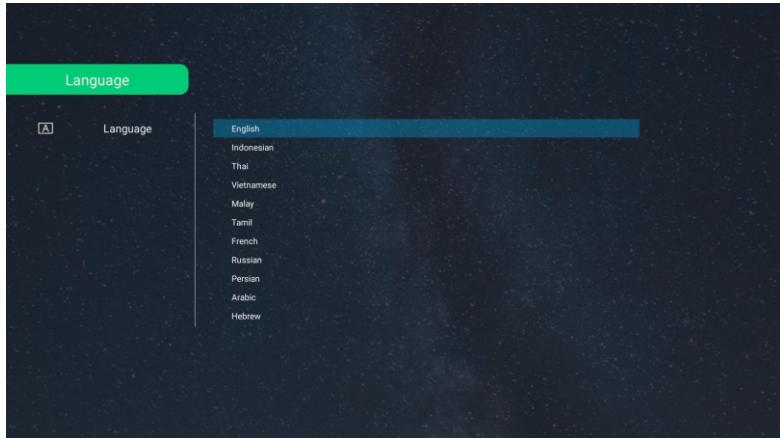


4.6.4 time

In this option, the user can date and time of the TV set.

The date and time settings are as follows:

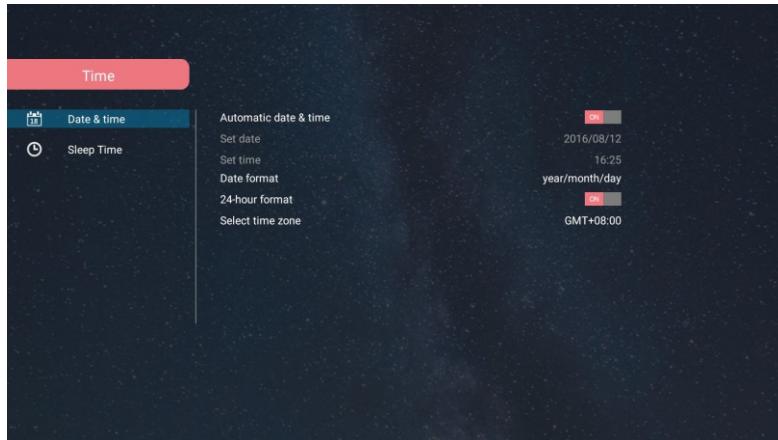

Sleep settings are as follows:

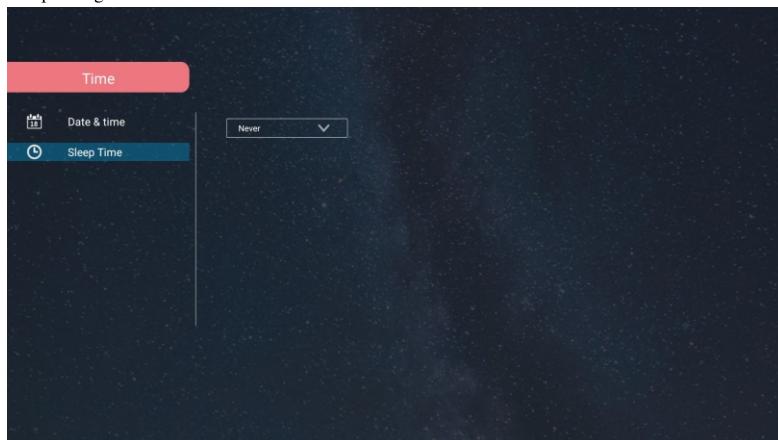

4.6.5storage


In this option, the user can view the storage capacity of television equipment, application installation location, and other related settings.

Memory settings area follows:



Unknown sources:

After opening can install third-party applications

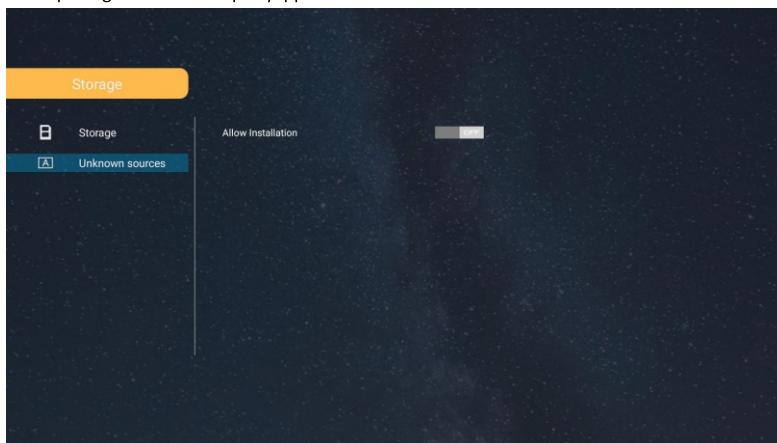

4.6.6 application


It displays the current classification system for all applications and running applications
Application settings area follows:



running:




Downloaded:

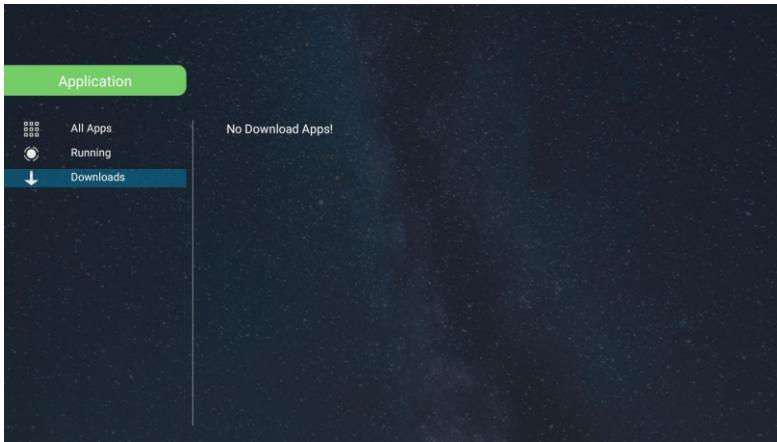


4.6.7 Update

Upgradesettingsareasfollows:

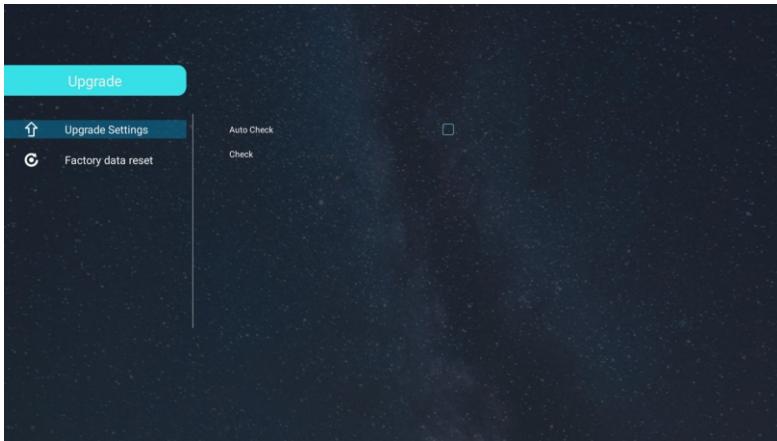

3. 4 Function

On the remote control Press [MENU] button to display the main menu via $\blacktriangle / \blacktriangledown$ keys to move to select [Function] submenu, press \blacktriangleright button to enter, press $\blacktriangle / \blacktriangledown$ keys to move to select the sub project you want to set, then press [OK] to enter the setting.

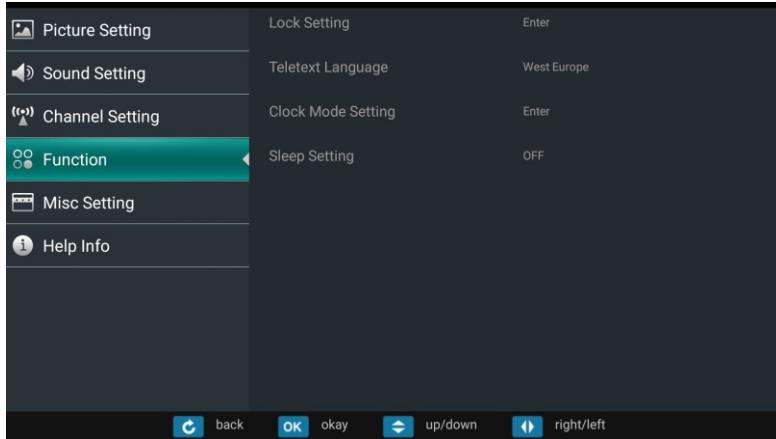

3. 4. 1 Lock Setting

This option to automatically adjust the screen display horizontal position, vertical position, etc. to achieve the most suitable display.

3. 4. 2 Teletext Language

This option to adjust teletext language by $\blacktriangle / \blacktriangledown$ key.

3. 4. 3 Clock Mode Setting

This option to adjust the clock mode, the $\blacktriangle / \blacktriangleright / \blacktriangle / \blacktriangledown$ keys to adjust the time.

3. 4. 4 Sleep Setting

This option to adjust sleep time to adjust the phase value by the size of the $\blacktriangle / \blacktriangledown$ key.

Panel function key does not respond correctly.	<ul style="list-style-type: none">Under the influence of electrostatic phenomenon, the product may malfunction and require user to power reset.Unplug and re-plug the AC power cord.
The display monitor's panel goes hot.	<ul style="list-style-type: none">LED TV takes inside light phosphor. It may increase the temperature of the screen in some occasions. It's not a defect.
Unusual dots	<ul style="list-style-type: none">Black dots and bright points may appear on the LED screen. This is a structural property of the LED panel and is not a defect.
Stripes on screen	<ul style="list-style-type: none">Adjust the impulse phase may decrease stripes.
The top of the monitor gets hot.	<ul style="list-style-type: none">It may occur during long-time working. It's not a defect.
Unable to select a certain channel.	<ul style="list-style-type: none">The channel may be skipped. Choose this channel by directly selecting the buttons from the remote control.
Disorderly display at power on.	<ul style="list-style-type: none">This may be caused because of a very short interval between POWER OFF and ON.Unplug the power and restart.

Help

No Power	Check the AC cord of TV is plus in or not. If still no power, please Pull out the plug and replug in after 60 seconds. And open the TV again
Signal receive not properly	<ul style="list-style-type: none"> To cause double image or phantom if there has high building or high mountain round TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. If you use the indoor antenna . under certain circumstance, receive will be more difficult . So you can change the direction of the antenna to adjust the image effect . If can't change image receiving effect either , you have to use external antenna.
No picture	<ul style="list-style-type: none"> Check the antenna at the back of TV is connected properly or not. Try to select other channels and check whether the TV problem itself or not
but, Video is ok without audio	<ul style="list-style-type: none"> Increase the volume. Check the TV is in mute mode or not , and please press the mute button to make sound resume.
Audio is ok, but color error or no picture.	<ul style="list-style-type: none"> Increase contrast and brightness.
snow statics picture and noise	<ul style="list-style-type: none"> Check the antenna at the back of TV is connected or not.
Level broken line	<ul style="list-style-type: none"> vacuum, such as hair drier, Maybe has electrical appliance interfere· please turn off these kinds of electrical appliance, cleaner and so on.
Image or-Dual "simulacrum" The TV no response with the Remote.	<ul style="list-style-type: none"> Perhaps the location for the antenna is not good.Use the tall beamed antenna can be improved quality of the display image. Operate the remote direct to the remote sensor on the TV.If still no response for the TV, please check if the plastic bag on the remote take or not. And check if the location for the battery is correct.Change the new battery. The TV will shift to the STAND BY if no response from the remote in the few minutes.
.NO Video In (PC Mode)	<ul style="list-style-type: none"> Please check if the display cable connect to the VGA correcte . Please check if there has the bend on the display cable.
Vertical twinkling (PC Mode)	<ul style="list-style-type: none"> Enter the main menu, Use the clock regulator for the Video display noise to eliminate the vertical line.
horizontal ripping (PC Mode)	<ul style="list-style-type: none"> Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	<ul style="list-style-type: none"> Adjust the contrast ratio or brightness in the main menu.
PC Function no response	<ul style="list-style-type: none"> Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	<ul style="list-style-type: none"> Please use good quality connecting cable.
Problem still exist	<ul style="list-style-type: none"> Unplug the power cable and wait for 30 seconds, then connect.If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

There will be complete picture and the brightness will come down if the TV is in: Note So please do not keep the TV in a state of same, the static picture for too long time Menu or same picture that has much difference in brightness and contrast ratio for too long time.

Product fiche

LED4901

- Supplier's name: Manta S.A.
- Supplier's model: LED94901S
- Energy efficiency class: A
- Visible screen diagonal in centimetres and in inches:127cm;49"
- On-mode power consumption: ≤120 W
- Annual energy consumption: 112 kWh/year
- Standby and off-mode power consumption: <0,5 W
- Screen resolution in physical horizontal and vertical pixel count: 3640X2610

Note!

Product design and Technical parameters may be change without notice. This mainly concerns parameters technical, software and user manual present. User's Manual is a general orientation on service product. Manufacturer and distributor do not assume any responsibility as compensation for any inaccuracies errors in the descriptions appearing in this user manual.



INFORMACJA O PRAWIDŁOWYM POSTĘPOWANIU W PRZYPADKU UTYLIZACJI URZĄDZEŃ ELEKTRONICZNYCH I ELEKTRYCZNYCH

Umieszczony na naszych produktach symbol przekreślonego kosza na śmieci informuje, że nieprzydatnych urządzeń elektrycznych czy elektronicznych nie można wyrzucać razem z odpadami gospodarczymi.

Właściwe działanie w wypadku konieczności utylizacji urządzeń czy podzespołów lub ich recyklingu polega na oddaniu urządzenia do punktu zbiórki, w którym zostanie ono bezpłatnie przyjęte. W niektórych krajach produkt można oddać podczas zakupu nowego urządzenia.

Prawidłowa utylizacja urządzenia daje możliwość zachowania naturalnych zasobów Ziemi na dłużej i zapobiega degradacji środowiska naturalnego. Informacje o punktach zbiórki urządzeń wydają właściwe władze lokalne.

Nieprawidłowa utylizacja odpadów zagrożona jest karami przewidzianymi prawem obowiązującym na danym terenie.



SERVICE INFOLINE

tel: +48 22 332 34 63 or e-mail: serwis@manta.com.pl
from Monday to Friday. 9.00-17.00

The manufacturer reserves the right to make changes to product specifications without notice.

Home: www.manta.com.pl

Home support: www.manta.info.pl

All certificates and technical data available on the www.manta.com.pl



ASSEMBLED IN POLAND