



LED9500S

Instrukcja obsługi / User's manual


CAUTION**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High voltages are used in the operation of this product.to reduce the risk of electric shock,do not remove cover of the cabinet, refer servicing to qualified service personal

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.

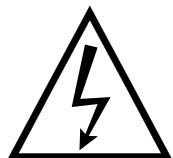

Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


Important Safety Precautions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Warning to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
16. The socket-out shall be installed near the equipment and shall be easily accessible.
17. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
18. Apparatus shall not be exposed to dripping or splashing.
19. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
20. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
21.  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
22. The USB terminal should be loaded with 0.5 A under normal operation.

TV Bracket assemble

Fix the TV on the wall

1. First, put the TV on the table smoothly and put some soft cloth on the table to avoid scratching the screen.
2. User the screw driver to take off the screws which are fixed on the bottom stand (the direction of the arrow, refer to the photo1). And take off the bottom stand (please take off the screws and bottom stand carefully).
3. Make one bracket which can fix on the wall according to the size of arrow direction of photo2 and photo3.
4. Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts) Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts)
5. according to the step 4, use the screwdriver to lock the screw on the back of the TV. then hang the TV on the wall.

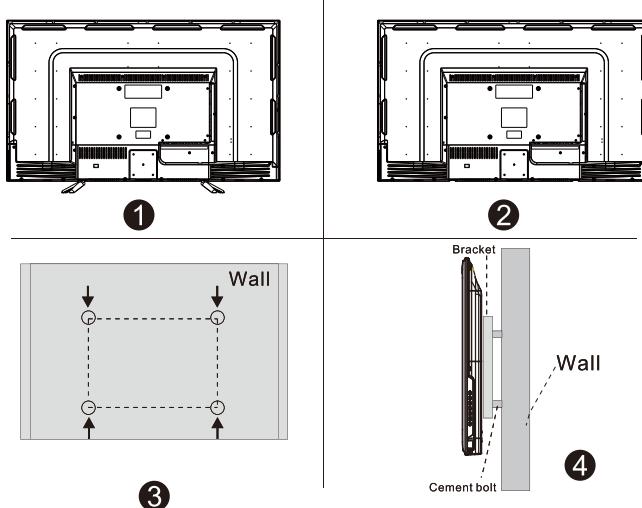

Note:

1. The bracket fixed on the wall is optional part.
2. when you assemble the TV, there should be no other articles on the around and front and please keep the distance from other articles.
3. When assemble the TV, please ask the career man to fix in order to avoid the danger.
4. The fixing picture is only for reference.
5. Please follow the use manual about bracket assemble to fix the TV.
6. Attach the mounting bracket from the VESA compatible wall mounting kit.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



POWER: Turn ON/OFF Power.

SOURCE: External Signal Input Selection.

MENU: Display Main MENU And Confirm MENU Item Selection.

CH+/-: Selecting Channel.


VOL+/-: Adjusting Volume.

Terminal Interface


Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	AV input External AV Signal Input And Relevant Right/Left Sound Channel		EARPHONE output When earphones are plugged in, speakers are disabled
	CI SLOT The card reader input CI(common interface) this requires CAM (conditional access module) used for pay TV.		USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	Y Pb Pr input Connect to the composite terminal of your DVD/VCR (Some models without this interface)		
	HDMI input Digital signal input from HDMI video connector.		
	VGA input PC analog signal input		
	PC AUDIO INPUT VGA input and audio input when VGA input		
	SCART input standard,it supports composite and RGBsignal input.It is a connection for european (Some models without this interface)		

External device connection diagram

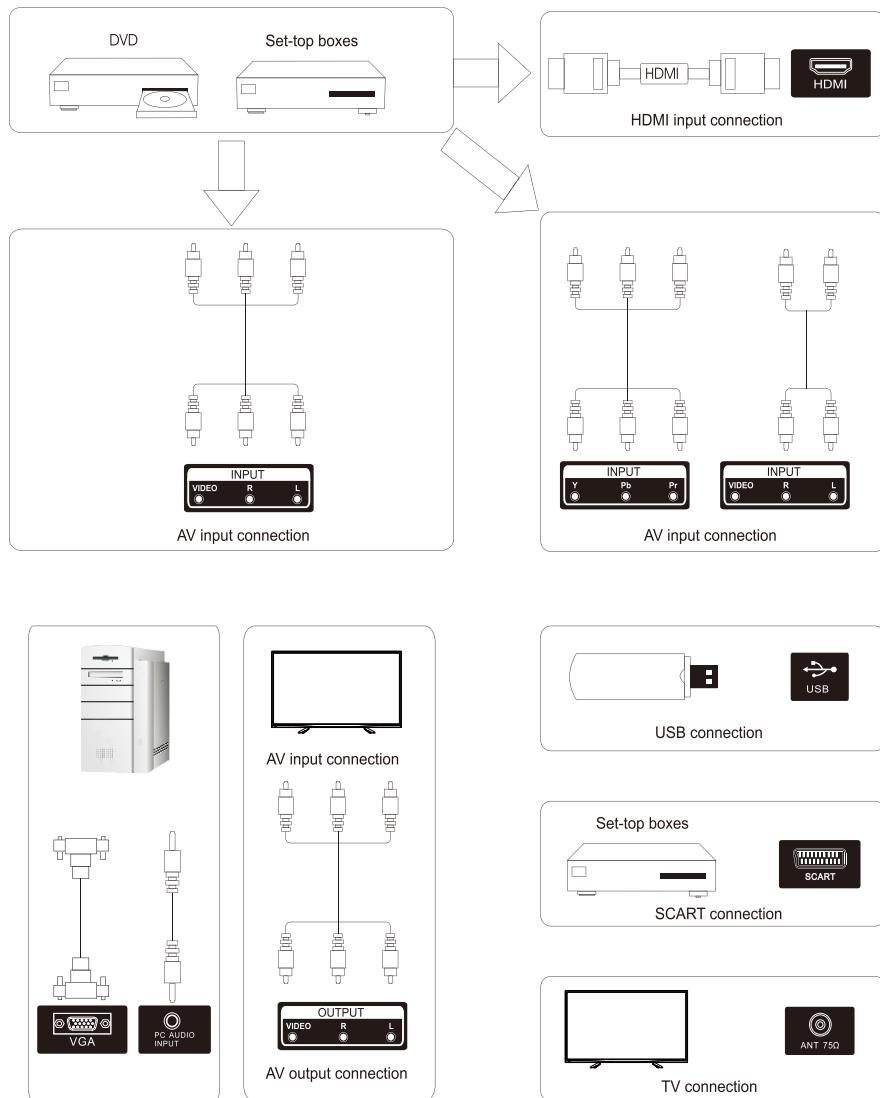


Install and connect TV

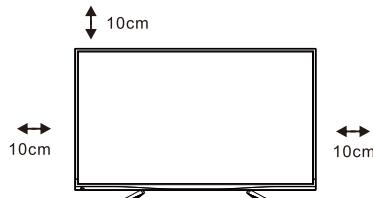

Set your TV

To put your TV in a firm place which can bear the weight of the TV.

To avoid danger, please don't expose the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

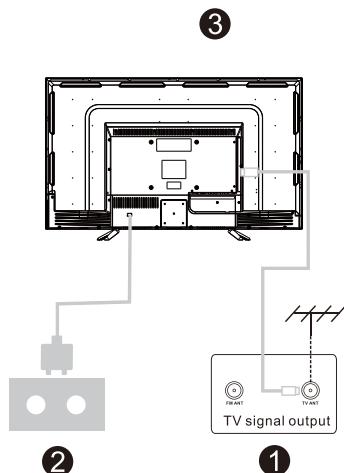

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

Turn on TV

3. Press the power button of the TV the indication light will turn to green, if it is on standby mode (the light is red), press the power button on the remote control to turn on the TV.



Note:

Picture for reference purposes only.

TV Stand Installation Instructions

- 1- Place the stands into their own slots under the device.


- 2- Fasten the stand to the device with screw.

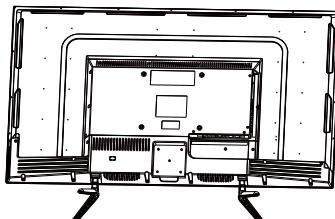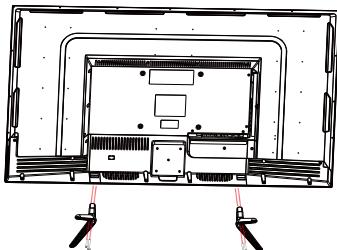

Note:

Picture for reference purposes only. Please prevail in kind

REMOTE CONTROL INSTRUCTIONS

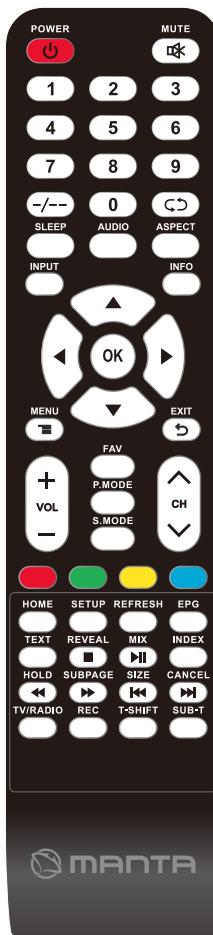

POWER (⊕): Press to turn the TV on or to enter Standby mode.

MUTE (🔇): Reduces the TV volume to its minimum level. Press again to restore the volume.

NUMBER BUTTONS: Press 0-9 to select a TV channel directly when you are watching TV.

“—/-”: Press once to enter 1-digit channel number; press twice to enter 2-digit channel number and press three times to enter 3-digit channel number.

Recall (⌚): Returns to the previous channel.

SLEEP: Selects the sleep timer, after which the TV will shut off automatically.

AUDIO: Switch the audio channel to DVD or multimedia mode.

ASPECT: Switches between the preset screen size mode.

INPUT: Accesses the available input channels. Use the arrows to highlight options, and press OK to select.

INFO: Press to display the current program information on the screen.

Arrows (◀ / ▶ / ▲ / ▼): Uses the four arrows to highlight different items in the TV menu or change the value.

OK: Enter and confirm button.

MENU: Accesses the Main Menu or returns to the upper level of a sub-menu.

EXIT: Exits the current menu or function.

VOL+ or VOL-: Increases or decreases the TV volume.

FAV: Adds the current channel to your favorite list, or erases the current channel from your favorite list (if this channel is a favorite channel already).

P.MODE: Switches between the preset picture mode.

S.MODE: Switches between the preset sound mode.

CH+ or CH-: Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels.

HOME: Press to open Android home page.

SETUP: Press to open Android's settings menu.

REFRESH: To refresh the page.

EPG: Shows Electronic Program Guide


TEXT: To enter Teletext mode.

REVEAL: Teletext mode-To reveal or hide the hidden words.

MIX: TV and TXT picture are mixed together in transparent background.

INDEX: To display the index page.

REMOTE CONTROL INSTRUCTIONS

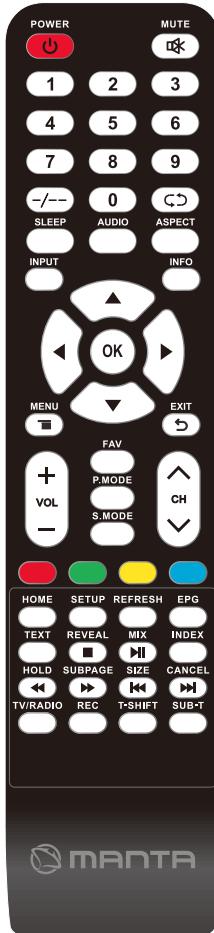

HOLD: Teletext mode-Hold current page which is display.

SUBPAGE: Sub coded page access

SIZE: Change the size of display in Teletext mode.

CANCEL: To cancel the display

TV/RADIO: Switch between TV and RADIO. Used for models with DTV function only.

T-SHIFT: Press to activate Time Shift function in Digital TV mode, for delayed viewing.

REC: Presonal video record button.

SUB-T: Select sub-title of media video file.

[▶] [■] : PAUSE and STOP.

[◀] [▶] : Rewind and fast forward.

[◀] [▶] : Selects the previous or next media file.

RED/GREEN/YELLOW/BLUE: Use add-on functions in OSD menu.

Please note:

- ◆ All pictures in this manual are for reference purposes only, actual product may differ from the pictures.
- ◆ The buttons not mentioned here are not used.

Select Input Source



Basic Menu Operation

Press SOURCE button on the remote control to display the input source list.

Press ▼ / ▲ button to select the input source you want to watch.

Press ENTER button to enter the input source.

Press EXIT button to quit.

Picture Menu

Press MENU button to display the main menu.

Press ▲ / ▶ button to select PICTURE in the main menu, it will highlight the first option.

1. Press ▼ / ▲ button to select the option that you want to adjust in the PICTURE menu.
2. Press ▲ / ▶ button to adjust.



3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

Picture Mode

Press **▼ / ▲** button to select **Picture Mode**, then press **ENTER** button to enter sub-menu. Press **▼ / ▲** button to select. (Available Picture mode: Dynamic, Standard,Mild,Personal).

You can change the value of contrast, brightness, color and sharpness when the picture is in Personal mode.

TIPS: You can press **PMODE** button on the remote control to change the Picture Mode directly.

Brightness

Press **▼ / ▲** button to select **Brightness**,then press **ENTER** button to enter sub-menu.Press **◀ / ▶** button to adjust.

Contrast

Press **▼ / ▲** button to select **Contrast**,then press **ENTER** button to enter sub-menu.Press **◀ / ▶** button to adjust.

Sharpness

Press **▼ / ▲** button to select **Sharpness**,then press **◀ / ▶** button to adjust.

Saturation

Adjust the saturation of the color based on your own like.

Hue

Use in compensating color changed with the transmission in the NTSC code.

Color Temp

Press **▼ / ▲** button to select **Color Temperature**,then press **◀ / ▶** button to select. (Available Color Temperature: Standard,Cool,Warm).

Aspect Ratio

Press **▼ / ▲** button to select **Aspect Ratio** ,then press **◀ / ▶** button to select. (Available Aspect Ratio:Full,Zoom1,Zoom2,4:3).

Screen Mode

Select three modes, available including Video, PC, Auto. Only available under HDMI and PC source.

Advanced Settings


Adjust advanced video features to fine tune the picture. This includes NR and Dynamic Contrast option. When you use these options for adjustment, the screen shows the effect.



Sound Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **Sound** in the main menu, it will highlight the first option.

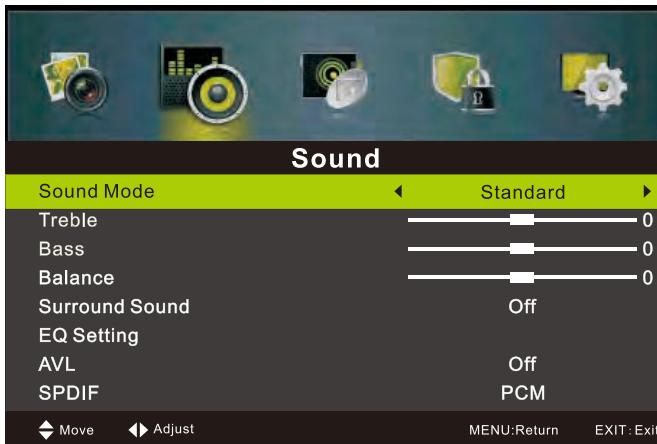

1. Press **▼ / ▲** button to select the option that you want to adjust in the **SOUND** menu.

2. Press **◀ / ▶** button to adjust.

3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

Sound Mode

Press **▼ / ▲** button to select **Sound Mode**, then press **ENTER** button to enter sub-menu. Press **▼ / ▲** button to select. (Available Sound mode: Standard, Music, Movie, Personal).

You can change the value of Treble and Bass when the sound is in Personal mode.

TIPS: You can press **SMODE** button on the remote control to change the Sound Mode directly.

Treble

Press **▼ / ▲** button to select **Treble**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

Bass

Press **▼ / ▲** button to select **Bass**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

Balance

Press **▼ / ▲** button to select **Balance**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

Surround Sound

Press **▼ / ▲** button to select **Surround Sound**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to select On or Off.

EQ Setting

Press ▼ / ▲ button to select EQ Setting, then press ENTER/ ► button to enter submenu.



AVL

Press ▼ / ▲ button to select **AVL**, then press Press ◀ / ▶ button to select On or Off.

SPDIF

Press ▼ / ▲ button to select **SPDIF**, then press Press ◀ / ▶ button to select Off,Auto,PCM.

Audio Description

Press ▼ / ▲ button to select **Audio Description**, then press ENTER/ ► button to enter submenu.



Channel Menu

Sound Type

Press ▼ / ▲ button to select **Sound Type**,then press Press ◀ / ▶ button to select Stereo,Duall,Dual II,Mixed .

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **CHANNEL** in the main menu,it will highlight the first option.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press ◀ / ▶ button to adjust.
3. After finishing your adjustment,Press **MENU** button to return back to the previous menu.

Tuner Type

Press ◀ / ▶ button to select Tuner Type. Including antenna and cable.


Auto Scan

Press ▼ / ▲ button to select **Auto Scan**, then press ENTER/▶ button to enter submenu.
(Default password is '0000')




Manual Scan


Press ▼ / ▲ button to select **Manual Scan**, then press ENTER/ ► button to enter submenu.
(Default password is '0000')

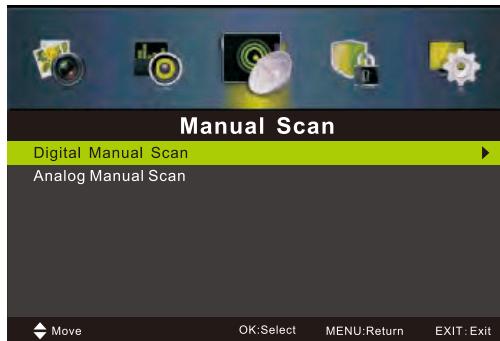**Digital Manual Scan**

Press ▼ / ▲ button to select Digital Manual Scan, then press ENTER/ ► button to enter submenu.

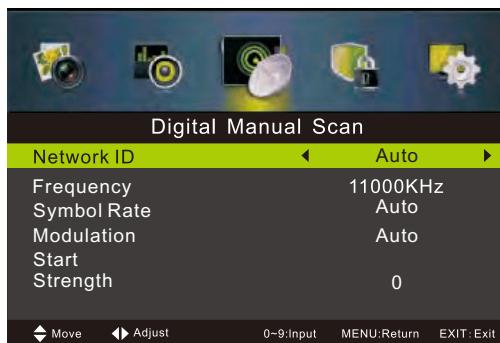**Analog Manual Scan**

Press ▼ / ▲ button to select Analog Manual Scan, then press ENTER/ ► button to enter submenu.

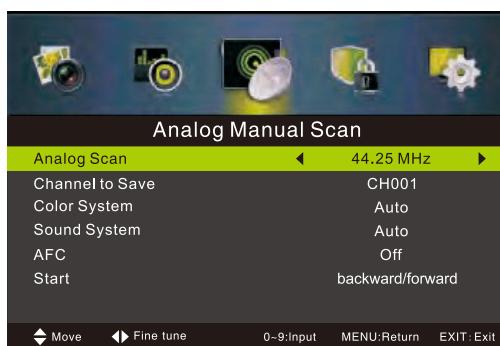

Auto Channel Update

Press ▼ / ▲ button to select Auto Channel Update, then press Press ◀ / ▶ button to select On or Off.

Channel Edit

Press ▼ / ▲ button to select **Channel Edit**, then press ENTER/▶ button to enter submenu(Default password is '0000').




The four colored key is the shortcut key for programming the channel.
First press ▼ / ▲ to highlight the channel you want to delete or move or skip, then:
Press the **Red** button to delete the channel.
Press the **Green** button to skip the select channel.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)
Press the **Blue** button to set the channel to moving state. then press ▼ / ▲ to move it to the position you want to put.
Press the **Yellow** button to rename the select channel.

Favorite Manager

Press ▼ / ▲ button to select **Favorite Manager**, then Press ENTER/▶ button to enter submenu. Then you can add channels to different favorite list by pressing color buttons. you can call the favorite list by FAV button after setting.

Common interface

Press ▼ / ▲ button to select **Common interface**, then press ENTER/▶ button to enter submenu. Only available when there is CI card under DTV.

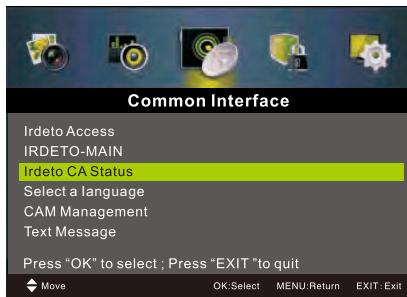

Signal Information

Press ▼ / ▲ button to select **Signal Information**, then press the Enter button to see the detail information about the signal. Only available when there is signal under DTV.

Lock Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **LOCK** in the main menu,it will highlight the first option.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **LOCK** menu.
 2. Press ◀ / ▶ button to adjust.
 3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

Enter Password

Press ▼ / ▲ button to select **Enter Password** ENTER
(Default password is '0000'). , then press button to make the following 4 options valid.

Enable

Press ▼ / ▲ button to select **Enable**, then press ◀ / ▶ button to select On or Off.
Channel Locks Parental Rating and Lock Keypad are available when Enable is On.

Channel Locks

Press ▼ / ▲ button to select **Channel Locks**, then press ENTER/▶ button to enter submenu.



Parental Rating

Press ▼ / ▲ button to select **Parental Rating**, then press ◀ / ▶ button to select.

Lock Keypad

Set to prevent it from being used by young children, or other unexpected usage.

Press ▼ / ▲ button to select Lock Keypad , then press ◀ / ▶ button to select On or Off.

New Password

Press ▼ / ▲ button to select New Password, then enter a 4-digit number you want to set twice.

Clear Lock

Press ▼ / ▲ button to select **Clear Lock**, then press ◀ / ▶ button to select.

Hotel Mode

Choosing the ▲ / ▼ select the menu item Hotel Mode, then go to the sub-menu, press ENTER to enter the sub-menu and activate the selected item.

Setup Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SETUP** in the main menu, it will highlight the first option.




OSD Language

Press **▼ / ▲** button to select OSD Language, then press **ENTER** button to enter sub-menu. Press **▼ / ▲ / ◀ / ▶** button to select OSD Language.

Audio Languages

Press **▼ / ▲** button to select **Audio Languages**, then press **Enter** button to enter submenu.

Press **▼ / ▲ / ◀ / ▶** button to select the Audio Primary Language and Audio Secondary Language

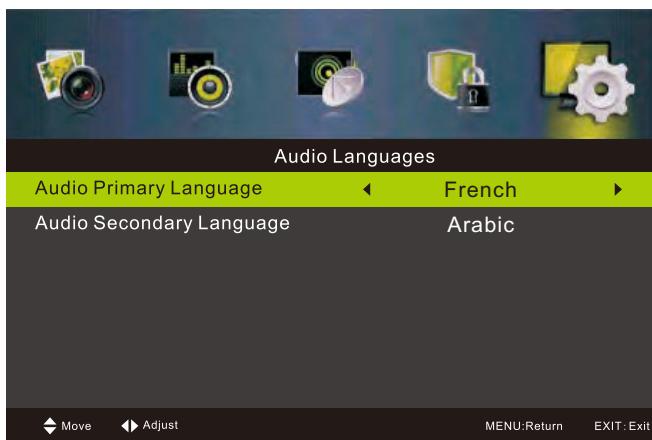

Subtitle

Press ▼ / ▲ button to select **Subtitle**, then press ENTER button to enter submenu.

**Teletext**

Adjust Teletext settings. Only available under DTV, ATV, SCART, and AV source.
Press ▼ / ▲ button to select Teletext, then press ENTER/ ▶ button to enter submenu.



Under DTV source, press ◀ / ▶ button to select Digital Teletext Language
Under ATV source, press ◀ / ▶ button to select Decoding Page Language

Blue screen

If you turn this on, the TV will display blue background when no signal is input.

Mode Setting

Adjust TV mode settings, including Home Mode and Store Mode,

Time Settings

Press ▼ / ▲ button to select **Time Settings**,then press ENTER button to enter submenu.




HDMI CEC Control: This setting is used to turn on/off HDMI CEC (consumer electronic Control)

PC Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SETUP** in the main menu, it will highlight the first option.

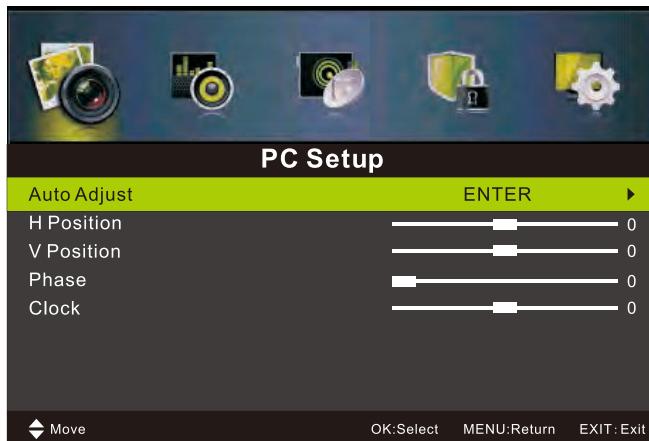

1. Press **▼ / ▲** button to select the option that you want to adjust in the **SCREEN** menu.
2. Press **ENTER** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Auto Adjust

Press **▼ / ▲** button to select **Auto Adjust**, then press **ENTER** button to start adjusting automatically.

H Position

Press **▼ / ▲** button to select **H Position**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

V Position

Press **▼ / ▲** button to select **V Position**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

Phase

Press **▼ / ▲** button to select **Phase**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

Clock

Press **▼ / ▲** button to select **Clock**, then press **ENTER** button to enter sub-menu. Press **◀ / ▶** button to adjust.

ATV /SCART/HDMI/ AV/YPbPr/PC

1. PC Setting in PICTURE menu is aviliable in **PC Input** only. Screen Mode in PICTURE menu and HDMI CEC Control in SETUP menu is aviliable in **HDMI Input** only.
2. Audio Description and Sound Type in AUDIO menu is invalid.
3. SCART/HDMI/AV/YPbPr/PC mode has no CHANNEL menu.
4. Parental Rating and Channel Locks in PARENTAL CONTROL menu is invalid for SCART/HDMI/AV/YPbPr mode. Parental Rating is invalid for ATV mode. PC mode has no PARENTAL CONTROL menu.
5. Audio Languages, Subtitle and PVR Settings in SETUP option are invalid for SCART/AV/PC mode. Audio Languages, Subtitle, Teletext PVR Settings in SETUP option are invalid for HDMI/YPbPr mode.

Media Menu

Note: Before operating **USB** menu, Plug in USB device, then press **INPUT** button to set the Input Source to **USB**. Press **◀ / ▶** button to select **USB** in the Source menu, then press **Enter** button to enter.



Press **◀ / ▶** button to select the option you want to adjust in the main **USB** menu, then press **Enter** button to enter.

Photo

Press **◀ / ▶** button to select PHOTO in the main menu, then press **Enter** button to enter.

Press **◀ / ▶** button to select drive disk you want to watch, then press **Enter** button to enter.

Press **◀ / ▶** button to select return option to back to the previous menu.



Music

Press **◀ / ▶** button to select MUSIC in the main menu, then press **Enter** button to enter.

Press **▼ / ▲** button to select drive disk you want to watch, then press **Enter** button to enter.

Press **▼ / ▲** button to select return option to back to the previous menu.



When highlighting the option you select, the file information will appear on the right.

Movie

Press **◀ / ▶** button to select MOVIE in the main menu, then press **Enter** button to enter.

Press **▼ / ▲** button to select drive disk you want to watch, then press **Enter** button to enter.

Press **▼ / ▲** button to select return option to back to the previous menu.



Text

Press **◀ / ▶** button to select TEXT in the main menu, then press **Enter** button to enter.

Press **▼ / ▲** button to select drive disk you want to watch, then press **Enter** button to enter.

Press **◀ / ▶** button to select return option to back to the previous menu.

When highlighting the option you select, the file information will appear on the right.



Help

No Power	Check the AC cord of TV is plus in or not. If still no power, please Pull out the plug and replug in after 60 seconds. And open the TV again
Signal receive not properly	<ul style="list-style-type: none"> To cause double image or phantom if there has high building or high mountain round TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. If you use the indoor antenna . under certain circumstance, receive will be more difficult .So you can change the direction of the antenna to adjust the image effect . If can't change image receiving effect either , you have to use external antenna.
No picture	<ul style="list-style-type: none"> Check the antenna at the back of TV is connected properly or not. Try to select other channels and check whether the TV problem itself or not
but, Video is ok without audio	<ul style="list-style-type: none"> Increase the volume. Check the TV is in mute mode or not , and please press the mute button to make sound resume.
Audio is ok, but color error or no picture.	<ul style="list-style-type: none"> Increase contrast and brightness.
snow statics picture and noise	<ul style="list-style-type: none"> Check the antenna at the back of TV is connected or not.
Level broken line	<ul style="list-style-type: none"> vacuum, such as hair drier, Maybe has electrical appliance interfere· please turn off these kinds of electrical appliance, cleaner and so on.
Image or-Dual "simulacrum" The TV no response with the Remote.	<ul style="list-style-type: none"> Perhaps the location for the antenna is not good. Use the tall beamed antenna can be improved quality of the display image. Operate the remote direct to the remote sensor on the TV. If still no response for the TV, please check if the plastic bag on the remote take or not. And check if the location for the battery is correct. Change the new battery. The TV will shift to the STAND BY if no response from the remote in the few minutes.
.NO Video In (PC Mode)	<ul style="list-style-type: none"> Please check if the display cable connect to the VGA correcte . Please check if there has the bend on the display cable.
Vertical twinkling (PC Mode)	<ul style="list-style-type: none"> Enter the main menu, Use the clock regulator for the Video display noise to eliminate the vertical line.
horizontal rippling (PC Mode)	<ul style="list-style-type: none"> Adjust the Audio sound horizontal in the main menu to clear the horizontal rippling line.
The screen is too bright or too dark (PC Mode)	<ul style="list-style-type: none"> Adjust the contrast ratio or brightness in the main menu.
PC Function no response	<ul style="list-style-type: none"> Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	<ul style="list-style-type: none"> Please use good quality connecting cable.
Problem still exist	<ul style="list-style-type: none"> Unplug the power cable and wait for 30 seconds, then connect.If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

There will be complete picture and the brightness will come down if the TV is in: Note So please do not keep the TV in a state of same, the static picture for too long time Menu or same picture that has much difference in brightness and contrast ratio for too long time.

Product fiche

LED9500S

- Supplier's name: Manta S.A.
- Supplier's model: LED9500S
- Energy efficiency class: A
- Visible screen diagonal in centimetres and in inches: 127 cm; 50"
- On-mode power consumption: 130 W
- Annual energy consumption: 111kWh/year
- Standby and off-mode power consumption: <0,5 W
- Screen resolution in physical horizontal and vertical pixel count: 1920x1080

Note!

Product design and Technical parameters may be change without notice. This mainly concerns parameters technical, software and user manual present. User's Manual is a general orientation on service product. Manufacturer and distributor do not assume any responsibility as compensation for any inaccuracies errors in the descriptions appearing in this user manual.

Notes

 **INFORMACJA O PRAWIDŁOWYM POSTĘPOWANIU W PRZYPADKU
UTYLIZACJI URZĄDZEŃ ELEKTRONICZNYCH I ELEKTRYCZNYCH**

Umieszczony na naszych produktach symbol przekreślonego kosza na śmieci informuje, że nieprzydatnych urządzeń elektrycznych czy elektronicznych nie można wyrzucać razem z odpadami gospodarczymi.

Właściwe działania w wypadku konieczności utylizacji urządzeń czy podzespołów lub ich recyklingu polega na oddaniu urządzenia do punktu zbiórki, w którym zostanie ono bezpłatnie przyjęte. W niektórych krajach produkt można oddać podczas zakupu nowego urządzenia.

Prawidłowa utylizacja urządzenia daje możliwość zachowania naturalnych zasobów Ziemi na dłużej i zapobiega degradacji środowiska naturalnego. Informacje o punktach zbiórki urządzeń wydają właściwe władze lokalne.

Nieprawidłowa utylizacja odpadów zagrożona jest karami przewidzianymi prawem obowiązującym na danym terenie.

Wszelkie certyfikaty oraz dane techniczne dostępne na stronie
www.manta.com.pl



Dział Obsługi Klienta

tel: +48 22 332 34 63 lub e-mail: serwis@manta.com.pl
od poniedziałku do piątku w godz. 9.00-17.00

Producent zastrzega sobie możliwość wprowadzenia zmian w specyfikację produktu bez uprzedzenia.

Strona główna www.manta.com.pl

Strona wsparcia technicznego www.manta.info.pl



ASSEMBLED IN POLAND