

**Minimum System Requirements for PC**

- 1.Compatible with PSX/PS2 and IBM PC with Pentium II 233 or above processor, and 64 MB RAM or more.
- 2.One or more USB port (PC).
- 3.Windows 98 second edition, Windows Me, Windows 2000 or Windows XP (PC).
- 4.Direct X 6.0 or above installed (PC).

**To install system driver(PC)**

Insert the floppy diskette or CD ROM included into the drive.

- 1.Click "Run (R)" at "Start" (which is at lower left corner of Windows).
- 2.Click "Browse" to choose "Setup".
- 3.Click "OK."
- 4.Run according to instructions on screen.
- 5.Connect the USB plug to your computer. A message of "New hardware detected" will be displayed and a HID driver will be installed automatically.


**NOTICE:**

There is no problem for plugging into the game pad to computer before or after the installation of driver from disk.

6.After installation is completed, go to Control Panel of Windows.

7.Double click icon of "Game Controllers".

8.On the dialog of Controller, click "Add...".

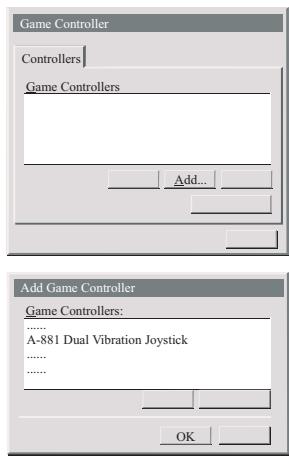

9.Select "A-881 Dual Vibration Joystick" from the list of Game Controller. Then, click "OK".

10.From Game Controller dialog, select "A-881 Dual Vibration Joystick", then click "Properties".

11.Swirl the joysticks, press all buttons except


Mode, to verify their functions.

12.Test vibration at the second page "Effect page".

13.You can play game now.

14.Inside the game, it is best to select controller in OPTION or CONTROLLER to "A-881 Dual Vibration Joystick". Then, select corresponding buttons for gear shift or other functions.

15.In some games, force feedback can be set to different degree of different type of force. For example, Collision, Road Grip, etc. Try these setting to get satisfactory force feeling.

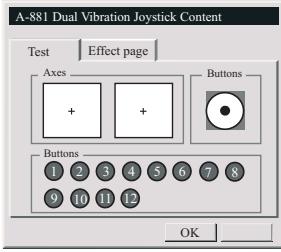**Problems may encounter**

Just plug in the game pad to your computer. Windows will detect and come up "New hardware is detected".

Then, install the HID driver according to instructions on dialog.

If no pop up menu is when the device is plugged in. Please check the following issue.

1.If it is connected to a HUB, try to connect directly to the computer.

2.If it is already connected to the computer, try another USB port.

3.Do not plug in inside any running software, particularly inside a game. Do it at root directory.

4.If it is connected during power up of computer, please unplug it and plug in again when computer start up is completed.

You may try to do it manually. Please go to Control Panel and double click "Add New Hardware". Then, follow instructions on the menu.

**Programming Auto Fire****Cleaning Auto Fire****POLSKI****Minimalne wymagania**

- 1.Urządzenie kompatybilne zarówno z konsolami PSX/PS2 jak i IBM PC z procesorem Pentium II oraz minimalną pamięcią 64 MB
- 2.Port USB (PC)
- 3.Windows 98 SE lub Windows ME (PC)
- 4.DirectX 6.0 lub nowszy (PC)


**Instalacja (PC)**

- 1.Włóż załączoną płytę CD lub dyskietkę do napędu.
- 2.Z menu wybierz opcję „Uruchom”.
- 3.Zatwierdź klikając „OK”.
- 4.Postępuj zgodnie z zaleceniami programu instalacyjnego.
- 5.Następnie połącz urządzenie z komputerem wtykiem USB. Wówczas na ekranie pojawi się komunikat „Znaleziono nowy sprzęt”.

**Uwaga!**

Nie ma żadnej różnicy, czy pad zostanie podłączony przed, czy po zainstalowaniu sterowników.

- 6.Gdyby system nie rozpoznał urządzenia, wejdź w „Panel sterowania”.
- 7.Wybierz ikonę „Kontrolery gier”.
- 8.Kliknij „Dodaj”.

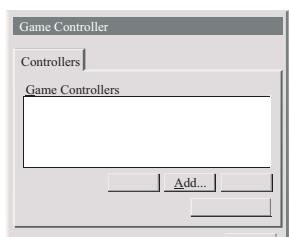

- 9.Wybierz z listy kontrolerów gier „A-881 Dual Vibration Joystick” i zatwierdź „OK”.
- 10.Klikając dwukrotnie na nazwie „A-881 Dual Vibration Joystick” wejdź do okna dialogowego kontrolera i kliknij zakładkę „Ustawienia”.


11.Poruszając manetkami i wciskając kolejno wszystkie przyciski przetestuj urządzenie. Jeśli nie działa poprawnie przejdź do zakładki „Kalibruj” i postępuj zgodnie z poleceniami.

12.Sprawdź działanie wibracji na następnej stronie „Effect Page”

13.Teraz możesz rozpocząć grę.

14.W grze możesz przypisać poszczególnym przyciskom inne funkcje (PC).

15.W niektórych grach wibracje mogą mieć zmienną siłę.

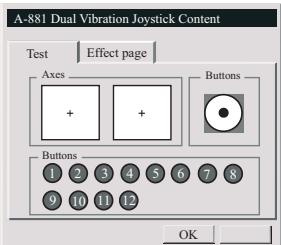**Jeśli nie działa prawidłowo**

Wystarczy podłączyć urządzenie do komputera, a system Windows wykryje je automatycznie i sam zainstaluje do niego sterowniki.

Jeśli informacja o znalezieniu nowego sprzętu nie pojawi się na ekranie wykonaj następujące czynności:

- 1.Jeśli urządzenie połączone jest przez HUB USB, połącz je bezpośrednio do komputera.
- 2.Jeśli urządzenie jest podłączone do komputera, spróbuj podłączyć je do innego portu USB.
- 3.Nie podłączaj urządzenia podczas gry. Najlepiej zrobić to zaraz po starcie systemu.
- 4.Jeśli urządzenie było połączone po starcie systemu, wyjmij i włóż wtyk, gdy system wystartuje.

**Ustawianie funkcji Auto Fire****Usunięcie funkcji Auto Fire**