

# Ninja

SHARK SH904



**RF Combo Wireless Mouse & Keyboard**

---


# Instrukcja obsługi

## Instalacja baterii

**Uwaga!** Bezprzewodowa myszka optyczna używa baterii typu AAA. Żeby osiągnąć najlepszą wydajność polecamy baterie alkaliczne.


### Instalacja baterii w myszce

- Otwórz klapkę gniazda baterii.
- Włóż baterię w kierunku wskazanym na rysunku do gniazda baterii.
- Zamknij klapkę gniazda baterii.

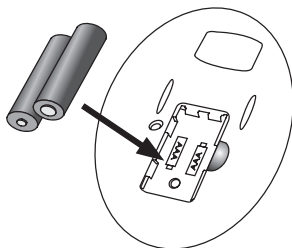


### Instalacja baterii w klawiaturze

- Otwórz klapkę gniazda baterii.
- Włóż baterię w kierunku wskazanym na rysunku do gniazda baterii.
- Zamknij klapkę gniazda baterii.

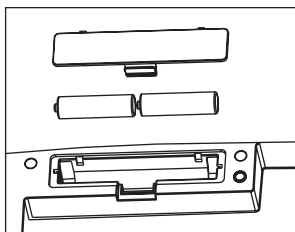

## Podłączenie odbiornika

**Uwaga!** Wyłącz komputer przed podłączaniem odbiornika. Nie zastosowanie się do tego polecenia może uszkodzić sprzęt.

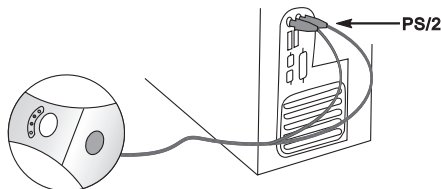

### Podłączenie PS/2

- Upewnij się że, twój komputer jest wyłączony.
- Podłącz wtyczki odbiornika do odpowiednich gniazd w komputerze.

### Podłączenie USB

- Upewnij się że, Twój komputer jest wyłączony.
  - Podłącz wtyczka odbiornika do odpowiedniego gniazda w komputerze.
- Kiedy odbiornik zostanie podłączony prawidłowo, zacznie świecić się dioda.


**Uwaga!** Jeśli Twój system operacyjny, to Windows 98, na ekranie wyświetli się instalator. Postępuj wg jego wskazówek. Przy Windows Me/2000/XP, instalator nie wyświetla się.



## Przygotowanie do pracy klawiatury i myszy

### Podłączenie myszki z odbiornikiem

- Wciśnij klawisz połączenia na odbiorniku.
- Wciśnij klawisz połączenia na myszce.
- Porusz myszką, aby się upewnić, że połączenia zostało nawiązane (dioda informacyjna zacznie błyskać).

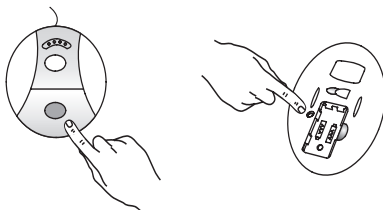


### Ładowanie akumulatorów

Odbiornik ma funkcję ładowania akumulatorów.

**Uwaga!** Ładowarki można używać tylko w przypadku korzystania akumulatorów, w żadnym razie nie należy wkładać do ładowarki baterii jednorazowych.


- Zdejmij klapkę z gniazda ładowarki w odbiorniku.
- Włóż dwa akumulatory niklowo-wodorkowe zgodnie z rysunkiem wewnątrz gniazda.
- Zamknij klapkę gniazda baterii.

Kiedy baterie znajdują się w ładowarce, odbiornik świeci czerwoną diodą.

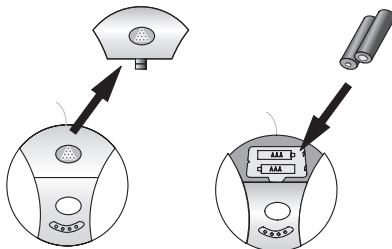

## Podłączenie klawiatury z odbiornikiem

- Wciśnij klawisz połączenia na odbiorniku.
- Wciśnij klawisz połączenia na klawiaturze.
- Wciśnij dowolny klawisz, by upewnić się, że połączenie zostało nawiązane (dioda informacyjna zacznie błyskać).

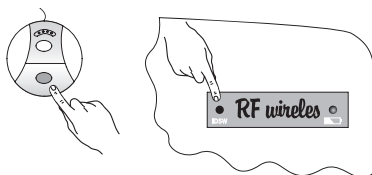

**Uwaga!** Zarówno klawiatura, jak i myszka ma indywidualne ID. Jeśli chcesz, możesz używać tylko myszki.

**Uwaga!** Pamiętaj o ponownym nawiązaniu połączenia zawsze, ilekroć będziesz wymieniał baterie.

## Dodatkowe klawisze.

Bezprzewodowa klawiatura ma dodatkowe klawisze do łatwiejszej kontroli multimediów i Internetu.


## Opis klawiszy

- |                                                                                                   |                                                                                                                   |
|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  Kalkulator      |  Otwórz odtwarzacz multimedialny |
|  Do tyłu         |  Wycisz                          |
|  Do przodu       |  Zmniejsz natężenie dźwięku    |
|  Moje ulubione |  Zwiększ natężenie dźwięku     |
|  Wyszukaj      |  Poprzedni                     |
|  Odśwież       |  Następny                      |
|  Mój komputer  |  Stop                          |
|  Poczta        |  Odtwarzaj/Pauza               |
|  Start         |  WWW Stop                      |
|  Uśpij         |                                                                                                                   |

## Jeśli wystąpią kłopoty

### Myszka i klawiatura nie działają mimo instalacji.

- W celu zapewnienia najlepszego kontaktu urządzeń z odbiornikiem zestaw 20 cm wolnej przestrzeni od wszelkich urządzeń elektronicznych (komputera, monitora, zewnętrznych napędów itp.)

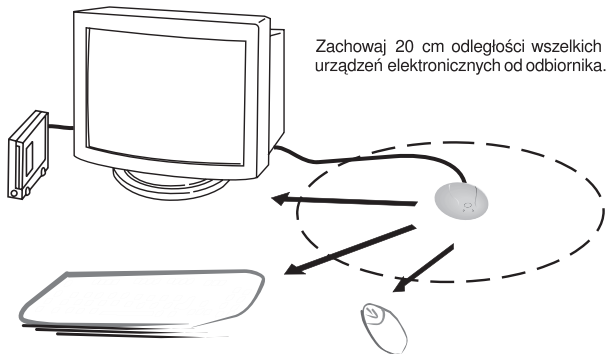

- Upewnij się, że baterie zostały poprawnie włożone oraz że nie są wyczerpane.
- Jeśli pracujesz na metalowej powierzchni, użyj podkładki pod myszkę.

### Kursor myszki nie porusza się właściwie lub nie wyświetlają się wciśnięte litery.

- Przysuń urządzenia bliżej odbiornika, ponieważ może on być zbyt daleko od myszki lub klawiatury. Masywny metalowy przedmiot też może wprowadzać zakłócenia w komunikacji z odbiornikiem.
- Zmień pozycję odbiornika.
- Sprawdź, czy w pobliżu nie pracuje podobne urządzenie. Być może ID urządzeń pokrywają się. Zmień ID urządzenia.

**Uwaga!** Produkt ma 255 możliwych kodów ID. Każde ID można zmienić tyle razy, by przestało zakłócać się z innym.


# User manual

## Installing Batteries

**Note!** Wireless optical mouse use two AAA batteries. For best performance use only alkaline batteries.


### Installing Batteries for the Mouse

- Release the side cover of the battery compartment.
- Insert the batteries as show to the battery compartment.
- Replace the cover of the battery compartment.

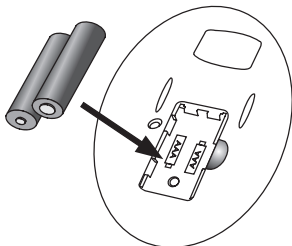


### Installing Batteries for the Keyboard

- Release the battery compartment cover on the bottom of the keyboard.
- Insert the batteries as show to the battery compartment.
- Replace the cover of the battery compartment.

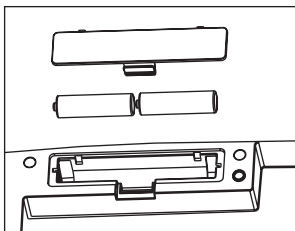

## Connecting the Receiver

**Note!** Turn off your computer before you connecting the receiver. It may damage your computer if you plug or unplug the connector of the receiver when the computer is still running.

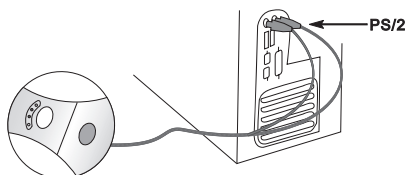

### For PS/2 Connector

- Make sure that your computer is turned off.
- Plug the connector of the receiver into the computer's PS/2 port.

### For USB Connector

- Make sure that your computer is turned off.
  - Plug the connector of the receiver into the computer's USB port.
- When connection is successful, the green indicator light shines.

**Note!** If your operating system is Windows 98, when you connect the receiver's USB connector, a series connector of automatic prompt will appear on the screen. You can follow the on-screen instructions. For Windows Me/2000/XP, there will be no such prompt.

#### Add New Hardware Wizard



This wizard searches for new drivers for

USB Human Interface Device

A device driver is a software program that makes a hardware device work.

< Back >

Next >


Cancel



## Setting up your wireless Keyboard & Mouse

### Connecting the Mouse with the Receiver

- Press the connecting button on the receiver.
- Press the connecting button at the bottom of the mouse.
- Move the mouse to make sure the connection is successful if the COM indicator is blinking.

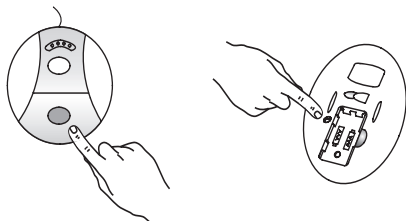


### Recharging Information

The receiver has recharging batteries function (the rechargeable batteries should be used when you use this function).


- Release the cover from the receiver.
- Insert the two AAA batteries to the battery compartment.
- Replace the cover when you make sure that the recharging function is working.

The red light, the left LED on the receiver, shines to indicate that the batteries are being recharged.

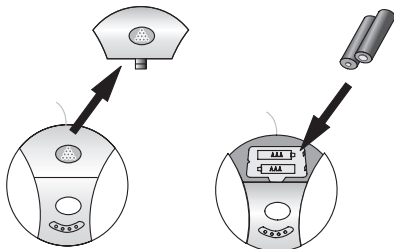

## Connecting the Keyboard with the Receiver

- Press the connecting button on the receiver.
- Press the connecting button at the bottom of the keyboard.
- Press any key to make sure the connection is successful if the LED indicator of the receiver is blinking.

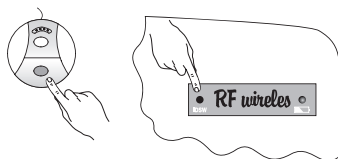

**Note!** The keyboard and mouse have individual ID, if you only got interference from mouse, you can just connect the mouse.

**Note!** If you changed the security ID successfully, you need to do the steps mention above to re-connect the mouse and the receiver each time when you replace batteries.

## Using the Hot Keys

The wireless keyboard comes with multimedia keys and Internet keys. All of these hot keys are compatible with Windows ME/2000/XP.

### The function of Hot Keys


|                                                                                                 |                                                                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
|  Calculator    |  Media Play   |
|  Backward      |  Mute         |
|  Forward      |  Volume-     |
|  Favorites   |  Volume+    |
|  Search      |  Previous   |
|  Refresh     |  Next       |
|  My Computer |  Stop       |
|  E-mail      |  Play/Pause |
|  Home        |  WWW Stop   |
|  Sleep       |                                                                                                |

## Troubleshooting

### Mouse and keyboard does not work upon instalation.

Try one more of the following:

- For optimal performance, place the receiver at least eight inches (20 cm) away from the mouse or other electrical devices, such as the computer, computer monitor or external drive.

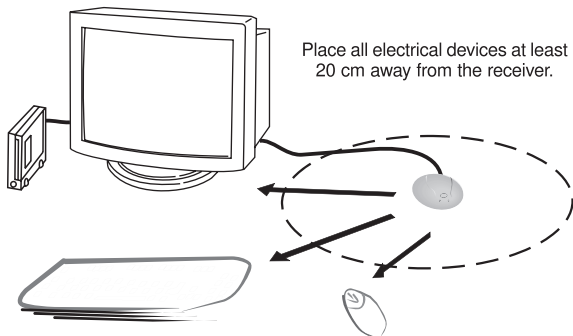

- Make sure you have installed the batteries correctly and the batteries not out of power.
- If you are working on the metallic surface, try using a mouse pad for better reception.

### The screen cursor does not move properly/charakters does not display when press keycap.

- Change the position of your radio receiver, because it may be too far from the mouse/keyboard. Or a large metal object may be interfere with the receivers radio reception.
- Try moving the receiver and/or mouse/keyboard to improve reception.
- The interference may occur from other same products at near distance in office/home, you may change the ID code several times in order to get optimal performance.

**Note!** The product has 255 possible ID codes. Every products may be defined in different ID code in order to avoid the interference from others.



Najszybszą metodą rozwiązania wielu problemów jest kontakt z naszym serwisem.  
**tel: (022) 332 34 63 – od poniedziałku do piątku w godz. 9.00-17.00**  
Producent zastrzega sobie możliwość wprowadzenia zmian w specyfikację produktu bez uprzedzenia.



Made in P.R.C.  
FOR SHARK EUROPE